



ABN 43 064 478 842

➤ 231 Osborne Avenue Clayton South, VIC 3169  
 PO Box 1548, Clayton South, VIC 3169  
 t 03 9265 7400 f 03 9558 0875  
 freecall 1800 680 680  
[www.tmgtestequipment.com.au](http://www.tmgtestequipment.com.au)

## Test & Measurement

- sales
- rentals
- calibration
- repair
- disposal

## Complimentary Reference Material

This PDF has been made available as a complimentary service for you to assist in evaluating this model for your testing requirements.

TMG offers a wide range of test equipment solutions, from renting short to long term, buying refurbished and purchasing new. Financing options, such as Financial Rental, and Leasing are also available on application.

TMG will assist if you are unsure whether this model will suit your requirements.

Call TMG if you need to organise repair and/or calibrate your unit.


If you click on the “Click-to-Call” logo below, you can call us for FREE!

TMG Corporate Website

TMG Products Website



Click-to-Call  
TMG Now

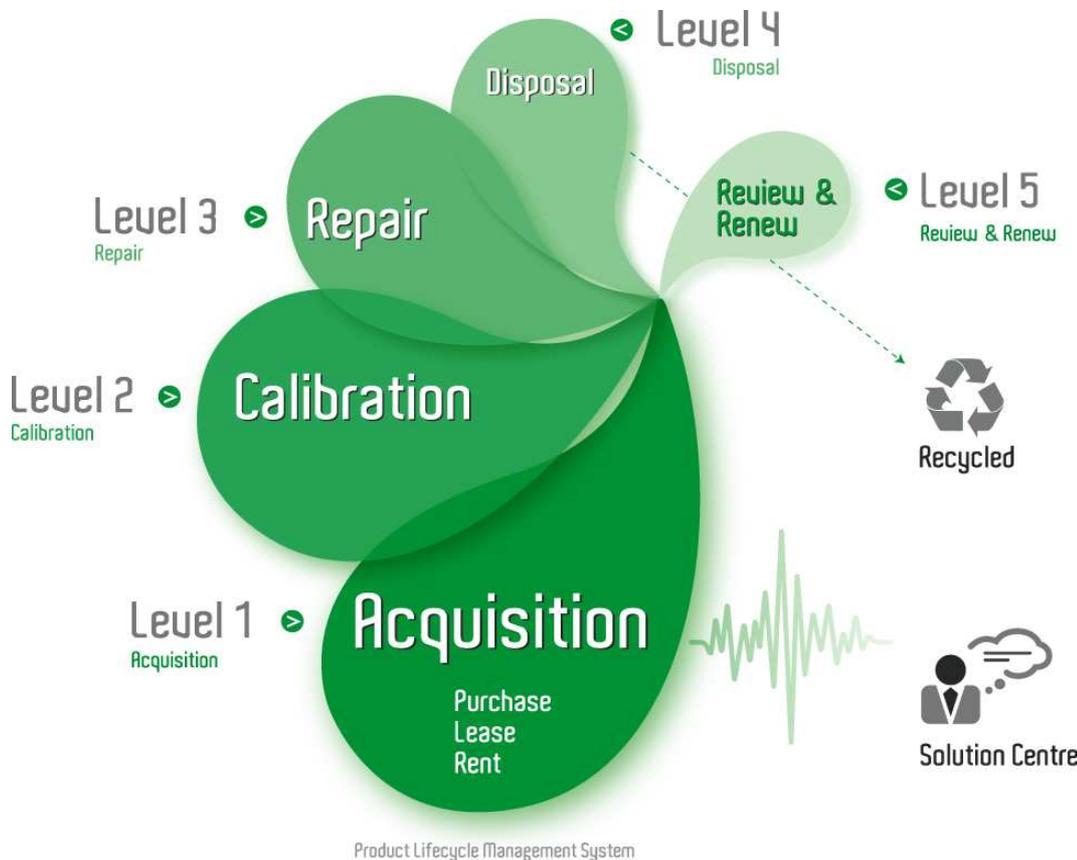

Product Lifecycle Management System

**Disclaimer:**

All trademarks appearing within this PDF are trademarks of their respective owners.





# user manual



## Transient Immunity Test Station **ECOMPACT 4**

Document Title	ECOMPACT 4
Release date	2008-04-08
Authors	B. Straumann / C. Faust
Reference No.	4700220/00

# Contents

<b>1</b>	<b>Safety</b>	<b>1</b>
1.1	General Safety information.....	1
1.2	Safety Standards.....	1
<b>2</b>	<b>Description</b>	<b>2</b>
2.1	System Overview .....	2
<b>3</b>	<b>Technical Data</b>	<b>3</b>
3.1	Power Supply .....	3
3.2	Mechanical .....	3
3.3	Environmental .....	3
3.4	EUT Monitoring .....	3
3.5	System Characteristics.....	3
3.5.1	IEC / EN 61000-4-4 Edition 2 Electrical Fast Transient Generator.....	3
3.5.2	IEC / EN 61000-4-5 Edition 1&2 Surge Combination Wave Generator .....	4
3.5.3	IEC / EN 61000-4-11 Edition 1&2 and IEC / EN 61000-4-29 Dips and Interrupts .....	4
<b>4</b>	<b>Commissioning</b>	<b>5</b>
4.1	Introduction .....	5
4.2	Visual Check .....	5
4.3	Installing the ECOMPACT 4.....	5
4.4	Powering the ECOMPACT 4 .....	5
<b>5</b>	<b>Operation</b>	<b>7</b>
5.1	Introduction .....	7
5.1.1	Rear Panel ECOMPACT 4.....	7
5.1.2	Rear Panel EUT Supply connections .....	8
5.1.3	Front Panel ECOMPACT 4 .....	9
5.2	General Operating Instructions.....	10
5.2.1	Select the Test Generator .....	10
5.2.2	Adjust the Test Parameters.....	10
5.2.3	Select Output .....	10
5.2.4	Memory Function .....	10
5.2.5	Fuse Function .....	11
5.2.6	Displayed Values .....	11
5.2.7	Error Messages.....	11
5.3	The EFT/Burst Generator.....	11
5.3.1	Overview .....	11
5.3.2	Coupling Path and Polarity Selection .....	11
5.3.3	Displayed Values .....	12
5.3.4	Energy Limiting .....	12
5.3.5	Continuous Burst.....	13
5.3.6	Starting and Stopping the Test.....	13
5.4	The Aux Function .....	13
5.5	The Surge Generator .....	13
5.5.1	Overview .....	13
5.5.2	Coupling Path and Polarity Selection .....	13
5.5.3	Displayed Values .....	14
5.5.4	Starting and Stopping the Test.....	14

5.5.5	AC Phase Synchronization .....	14
5.6	The Dips / Interrupts / Variations Generator .....	15
5.6.1	Overview.....	15
5.6.2	Rear Panel Connections.....	15
5.6.3	Displayed Values .....	15
5.6.4	Selection of Test Parameters .....	16
5.7	The Magnetic Field generator .....	16
5.7.1	Overview.....	16
5.7.2	Displayed Values .....	16
5.7.3	Selection of Test Parameters .....	17
<b>6</b>	<b>Software</b>	<b>18</b>
6.1	Overview.....	18
6.2	Installation.....	18
6.3	Connection to the ECOMPACT 4 generator .....	18
6.4	Basic terms .....	18
6.4.1	Automation file, automation window.....	18
6.4.2	Protocol file, protocol window .....	19
6.4.3	Selecting the Generator .....	19
6.4.4	Other functions .....	19
6.5	The EMV-Check screen.....	20
6.6	Menu Bar .....	20
6.6.1	File Menu.....	20
6.6.2	Generator menu.....	20
6.6.3	Automation menu.....	20
6.6.4	Protocol menu .....	21
6.6.5	Window menu.....	21
6.6.6	Info menu.....	21
6.7	Icon Bar .....	22
6.8	Automation window .....	22
6.8.1	Automation window icon bar .....	22
6.8.2	Test lines in the Automation Window.....	23
6.9	Protocol Window .....	24
6.9.1	Protocol window icon bar .....	24
6.9.2	Editing text in the Protocol Window .....	25
6.9.3	Automatic protocols .....	25
<b>7</b>	<b>Service</b>	<b>26</b>
7.1	Maintenance .....	26
7.1.1	Cleaning .....	26
7.1.2	Fuses.....	26
7.2	Failure Diagnoses and Handling .....	26
7.2.1	Error Reports .....	26
7.3	Verification .....	26
7.3.1	EFT Verification .....	26
7.3.2	Surge Verification .....	27
7.4	Replacement Parts .....	27
7.5	Customer Service .....	27
<b>8</b>	<b>Accessories and Options</b>	<b>28</b>
8.1	Accessories .....	28
8.2	Options .....	28

<b>9</b>	<b>Corrections and Additions</b>	<b>29</b>
9.1	Addresses .....	29
9.1.1	Headquarter Switzerland.....	29
9.1.2	North America Office.....	29
9.1.3	China Representative Office .....	29
9.1.4	Manufacturer.....	29
9.2	Annex 1 to 11 .....	30
9.2.1	Safety circuit diagram Fig.1.....	30
9.2.2	Rear panel connections Fig.2.....	31
9.2.3	Interface to PC Fig.3 .....	32
9.2.4	Burst generator output Fig.4 .....	33
9.2.5	Burst generator coupling example Fig.5.....	34
9.2.6	Surge generator output Fig.6 .....	35
9.2.7	Counter function overview Fig.7 .....	36
9.2.8	Surge coupling / decoupling example Fig.8.....	37
9.2.9	Internal dips transformer Fig. 9 .....	38
9.2.10	External dips transformer Fig. 10 .....	39
9.2.11	Voltage dips and interrupts output Fig.11.....	40
9.3	CE Declaration of Conformity .....	41



# 1 Safety

---

## 1.1 General Safety information

-  ***This equipment should only be operated after carefully reading the user manual.***  
*Throughout the user manual very important or helpful advice is presented in italics.*  
**Safety notices that must be heeded are printed in bold type**
  
-  ***Dangerous mains voltage is present inside the Generator and at the Line Input/ Output and HV sockets on both the front and rear panels***
  
-  ***The power input cable must be fitted with a protective earth***
  
-  ***For safety and functional reasons, the metallic grounding block at the rear panel needs to be connected to a solid protection earth of your test setup***
  
-  ***Before attempting to change fuses, remove all power cables from the instrument***
  
-  ***Operation on supplies protected by ground fault/residual current switches is not possible***
  
-  ***Only replace fuses with the same type and value***
  
-  ***Before removing any covers of the instrument, remove all external connection cables***
  
-  ***Do not open the generator, it contains no user replaceable parts. The generator should only be maintained by trained personnel***
  
-  ***People with heart pacemakers must not be in the vicinity of the instrument, when it is in operation***
  
-  ***Do not switch on or operate the instrument if an explosion hazard exists.***  
***The system should only be operated in a dry room. If condensation is visible, dry the unit before operating***
  
-  ***Never touch the Equipment Under Test (EUT), when the instrument is operating. Establish a safety barrier around the EUT to protect personnel during a test. Test cables must not be touched during operation of the instrument.***  
***The EUT should be covered and/or well marked during the tests.***  
***If test objects are likely to explode during tests they must be covered with a protective cabinet***
  
-  ***If the instrument is damaged or it is possible that damage has occurred, for example during transportation, do not apply supply voltage***
  
-  ***This user manual is an integral part of the test-system. Haefely Test AG and its sales partners refuse to accept any responsibility for consequential or direct damage to persons and/or goods due to none observance of instructions contained herein or due to incorrect use of the instrument***

---

## 1.2 Safety Standards

The ECOMPACT 4 fulfils the requirements of IEC 61010-1.

# 2 Description

## 2.1 System Overview

The ECOMPACT 4 is a compact instrument that performs common transient immunity tests such as EFT/Burst, Surge, Line Dips and Magnetic Field according to the IEC/EN 61000-4-XX series of tests.



Fig. 2.1

## 3 Technical Data

### 3.1 Power Supply

Control Power	100, 200, 115 or 230VAC
Power Consumption	100W
Frequency	50 or 60 Hz

### 3.2 Mechanical

Dimensions (W x H x D)	48 x 18 x 44 cm
Weight	30 kg

### 3.3 Environmental

Operating Temperature	15°C - 35°C
Relative Humidity	29 – 80%, non-condensing
Atmospheric Pressure	86 – 106 kPa

Do not subject to: Direct sunlight, water, high concentrations of dust or contaminants, shock, vibration, abnormally high electromagnetic interference.

### 3.4 EUT Monitoring

Current Measurement	AC/DC up to 20A, +/-2%, +/- 2 digits
Voltage Measurement	AC/DC up to 255V, +/- 2%, +/- 2 digits

### 3.5 System Characteristics

#### 3.5.1 IEC / EN 61000-4-4 Edition 2 Electrical Fast Transient Generator

Output Voltage	0.2 – 4.2 kV	Spike Frequency	0.5 – 100 kHz
Polarity	Positive and Negative	Burst Duration	0.75 – 130 ms
Output Impedance	50 Ohms	Burst Period	10 – 2400 ms
Rise Time	5 ns +/- 30%	Spikes per Second	Max. 2500 at U < 3 kV Max. 1250 at U = 3 kV to 4.2 kV
Impulse Duration	50 ns +/- 30% (50 Ω) 50 ns -15 +100 ns (1 k Ω)	Integrated Single Phase Coupling Decoupling Network	33 nF coupling capacitance 1.5 mH decoupling inductance 230V AC/60V DC, 16A

Definition in accordance with IEC 61000-4-4. See Annex Fig. 4.

### 3.5.2 IEC / EN 61000-4-5 Edition 1&2 Surge Combination Wave Generator

Output Voltage	0.2 – 4.2 kV	Output Current	0.1 – 2.1 kA
Voltage Rise Time	1.2 us +/- 30%	Current Rise Time	8 us +/- 20%
Voltage Duration	50 us +/- 20%	Current Duration	20 us +/- 20%
Polarity	Positive and Negative	Repetition Rate	10 s – 999 s
Output Impedance	2 $\Omega$	Integrated Single Phase Coupling Decoupling Network	18 uF / 0 $\Omega$ for differential mode 9 uF / 10 $\Omega$ for common mode 1.5 mH decoupling inductance 230V AC/60V DC, 16A
Synchronization	0 – 359 deg, 1 deg resolution 16.67 / 40 / 50 / 60 Hz		

Definition in accordance with IEC 61000-4-5. See Annex Fig. 6.

### 3.5.3 IEC / EN 61000-4-11 Edition 1&2 and IEC / EN 61000-4-29 Dips and Interrupts

Max. Voltage	250V AC/DC	Interrupt Time	0.1 ms – 998 s
Max. Current	16A AC/DC	Repetition Time	0.2 ms – 999 s
Dip Levels	0%, 40%, 70%, 80%	Phase Synch.	0 – 359 degree asynchronous 16 / 40 / 50 / 60 Hz

Definition in accordance with IEC 61000-4-11. See Annex Fig. 11.

## 4 Commissioning

### 4.1 Introduction

Before using the ECOMPACT 4, please study the user's manual carefully. Use of this equipment can be dangerous when these instructions are not followed correctly.



**Mains voltages are always a potential danger. This applies equally to all personnel. Persons with heart pacemakers must not be in the vicinity when the ECOMPACT 4 is operating!**

### 4.2 Visual Check

During transport, equipment can be subjected to vibration and shocks. Before operating the instrument for the first time, check that there are no signs of mechanical damage. Heavily damaged packaging is an indication that perhaps the instrument is damaged. Check for transport damage and immediately inform the shipping agent or your insurance company. Claims made at a later date may not be accepted.



**If damage is visible or suspected, never apply mains voltage to the instrument.**

### 4.3 Installing the ECOMPACT 4

Place the instrument on a ground reference plane (either on the floor or on a table top) that is large and stable. Ensure that the ventilator exit on the rear panel is not obstructed in any way. It is recommended that the equipment is placed at least 20 cm from a wall or other obstruction. Connect the generator GND using a copper band to the ground reference plane.

### 4.4 Powering the ECOMPACT 4

1. The ECOMPACT 4 may be powered from either 100, 200, 115 or 230VAC. The line voltage is preset in the factory based on the destination of the end-user, however it may be changed at any time by removing the bottom cover of the instrument and setting the line voltage switches as indicated in the figure below:

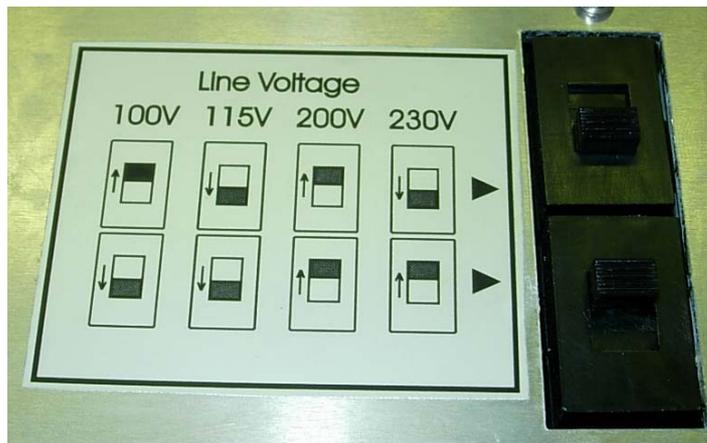


Fig. 4.1

Note that units supplied for use with 100V or 115V line voltage have dual 2A fuses at the line voltage input. Units supplied for use with 230V line voltage have dual 1A fuses at the line voltage input. When changing the operating line voltage of the instrument, the user should ensure the proper fuse rating is used based on the line voltage selected.

2. Connect the mains power from a standard wall outlet to the LINE INPUT on the back panel of the instrument, using the power cord supplied with the instrument.
3. Connect the EUT power supply to the COUPLING INPUT on the back panel of the instrument, using the power cord supplied with the instrument.



*Both the EUT power input sockets on the instrument and the EUT power cable supplied with the instrument are color-coded (Black = LINE, Blue = NEUTRAL, Yellow/Green = PROTECTIVE EARTH) to ensure that the EUT supply power is connected correctly. If the EUT supply power is connected incorrectly, the error lamp on the back panel near the coupling input will illuminate.*

4. Place the supplied safety circuit connector in the SECURITY SOCKET / EMERGENCY CUTOFF. If this connector is not in place, the error message "EMERGENCY-STOP!" will appear on the LCD display and the unit will not operate. Additional safety devices such as gate switches may be connected to the safety circuit connector in series. An overview schematic of the safety circuit is provided in Annex Fig. 1.
5. Connect a suitable ground to the ground terminal on the back panel of the instrument.
6. Use the POWER switch on the front panel to apply power to the instrument. The green LED in the STBY key should light. The LCD display will illuminate and the instrument is now ready for operation.

# 5 Operation

## 5.1 Introduction

The ECOMPACT 4 was designed for simplicity and all the functions of the instrument are controlled from the pushbuttons and rotary control knob on the front panel. The instrument may also be operated via its RS232 interface with the supplied “EMV-CHECK” software that can be loaded onto your PC.

Installation and operation of the “EMV-CHECK” software is described in section 6 of this operator’s manual.

### 5.1.1 Rear Panel ECOMPACT 4

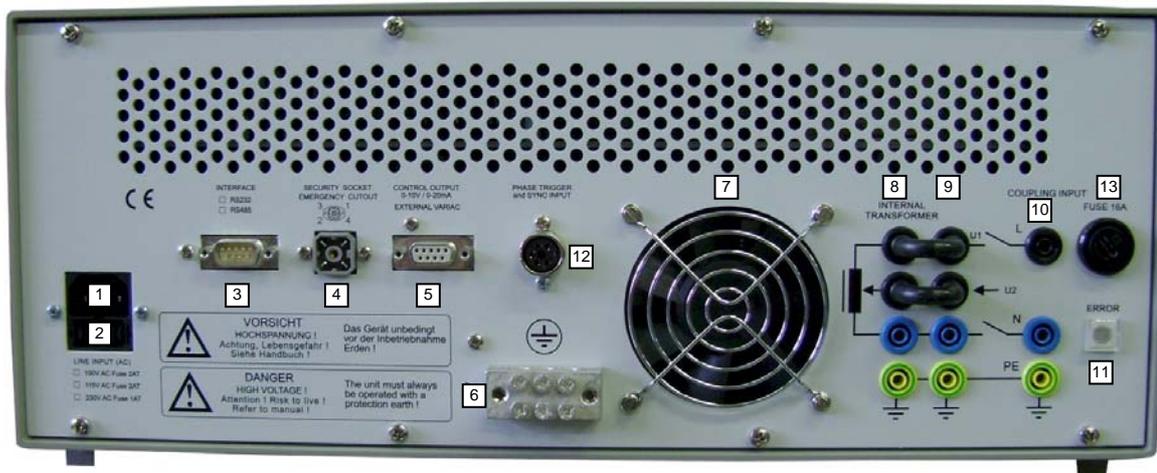


Fig. 5.1

Mains input	(1)	Internally selectable 100V/115V/200V/230V, 50Hz/60Hz
Mains Input fuses	(2)	Dual fuses (5x20mm) 2A T for use with 100V or 115V line voltage 1A T for use with 200V or 230V line voltage
Communication interface	(3)	RS232 (cable included) or RS485. See Annex Fig. 3 for more information
Safety circuit / Emergency switch/ Warning lamp connection	(4)	4 pole socket Requires included security connector to enable instrument to operate. Short circuiting pins 1+2 closes the safety circuit, and breaking the connection between pins 1+2 signals an emergency stop. (Emergency switch and warning lamp are not included in the standard scope of supply) See Annex Fig. 1 for more information
Control Output for optional external variac	(5)	SUB-D connector 9 pole female 0-10V gate voltage (10V = 127%) max. load 250 Ohms 0-20mA base current (20mA = 127%) See Annex Fig. 10 for more information
Grounding Block	(6)	For safety and functional reasons, this terminal needs to be connected to a solid protection earth of your test setup
Fan and cooling slots	(7)	Take care that the cooling fan and cooling slots on the rear of ECOMPACT 4 are not obstructed. A distance of 20cm between the equipment and obstruction is recommended
Internal dips transformer	(8)	Place the jumpers as shown when internal dips transformer is used (default)

connection		See Annex Figs. 9 and 10 for more information
External transformer connection	(9)	An external variable transformer (optional) can be connected here. See Annex Figs. 9 and 10 for more information
Internal coupling filter / EUT supply connections	(10)	Connect here EUT power supply. Phase and Neutral should be connected as indicated on the back panel
Error light	(11)	Indicates that phase & neutral connection at coupling input is interchanged
Phase Trigger / Synch Input	(12)	Synch signal reference input when used with ECOUPLER 4
Coupling Input / EUT supply fuse	(13)	Protects ECOMPACT 4 and EUT from overcurrent. 16A F (5x20mm)

### 5.1.2 Rear Panel EUT Supply connections

The coupling/decoupling network of the ECOMPACT4 cannot be used from a mains supply network protected by a ground fault Switch (differential current switch). In such a case an isolation transformer needs to be inserted between mains ECOMPACT4.

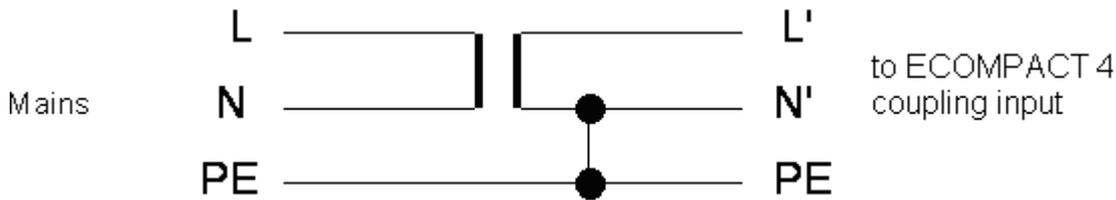


Fig 5.2

N' and PE must be connected in this case, so that in the case of a failure a follow current of the mains can flow into the EUT.

**Attention:**

**All further equipment connected after the isolation transformer are not protected any more by the ground fault protection switch.**

The connections L', N' and PE have the same behaviour as a normal TN-S-circuit.

### 5.1.3 Front Panel ECOMPACT 4



Fig. 5.3

Main power switch	(1)	Activates the ECOMPACT 4
Rotary Control Knob	(2)	Adjusts test parameters and settings of the ECOMPACT 4
Display	(3)	Main visual user interface, displays all test parameters
Generator button	(4)	Used to select which generator is active
Active generator LEDs	(5)	Indicate which generator is active
Test Parameter buttons	(6)	Used to select various test parameters for adjustment
Start / Stop button	(7)	Starts and stops a selected test
Output Active	(8)	Indicates a test is in progress and voltage is present at the selected output
Generator Outputs	(9)	Line
	(10)	Surge
	(11)	Burst
Generator Output buttons and indicators	(12)	Used to select and indicate the output path for the transient
Trigger output	(13)	Trigger output 5V TTL for oscilloscope triggering
Fuse button	(14)	Activates the electronic fuse function to set a mains overcurrent limit
Memory button	(15)	Used to store and recall pre-programmed tests
Ground connection	(16)	

---

## 5.2 General Operating Instructions

The ECOMPACT 4 uses pushbuttons to select test parameters and a rotary knob to adjust the values. This test data is shown on the display screen. Each pushbutton has a corresponding LED which indicates to the user which modes are active.

### 5.2.1 Select the Test Generator

Press the GENERATOR button and use the rotary knob to make a selection from the following choices:

-“Surge Generator?”
-“Burst Generator?”
-“Dips / Interrupts Generator?”
-“Power Frequency Magnetic Field?”

Confirm your choice by pressing the GENERATOR button again. This should activate the LED corresponding to the selected test. Selection of the Generator cannot be done while a test is running. Press the “Start/Stop” button to stop the current test before making a change.

### 5.2.2 Adjust the Test Parameters

The following test parameters may be activated by pressing the appropriate button. NOTE that some functions are specific to a given test and can only be activated when that generator is selected (e.g. the “Burst Time” function is specific to the Burst test and can only be activated when the “Burst Generator” is active, and not for example when the “Surge Generator” is active). Once activated, the corresponding LED will illuminate, and an arrow “>>” will appear in the display next to the active parameter.

“Voltage”	Sets the output / charge voltage.
“Rep Time”	Sets the time between successive transients (also known as burst period).
“Counter”	Selects the number of transients generated. See Annex Fig. 7.
“Phase”	Selects the phase of the mains input to which the transient is synchronized.
“Frequency”	Sets the spike frequency of the EFT/Burst waveform.
“Burst Time”	Sets the burst duration of the EFT/Burst waveform.
“Ramp”	Sets the ramp time for the voltage variations test.
“Interrupt”	Sets the interrupt time for the voltage dips / interrupts / variations test.

NOTE that only one parameter / function may be activated at a time and some functions cannot be accessed while a test is running.

### 5.2.3 Select Output

The ECOMPACT 4 has three transient outputs...

“Line”	The output is a European Schuko style mains connector, with six corresponding pushbuttons and LEDs above (high and low pos
“Surge”	High and low
“Burst”	SHV

### 5.2.4 Memory Function

Customized tests may be stored in the memory locations of the ECOMPACT 4. Eight memory locations are provided for Surge and Burst tests (location 0 to location 7), and four memory locations are provided for Dips/Interrupts test (location 0 to location 3).

The parameters in each memory location are factory programmed. A memory location may be overwritten at any time with the following procedure...

Once the desired test parameters are set, press and hold the “Memory” pushbutton until the LED lights. While still holding the “Memory” pushbutton, use the rotary knob and display to select the desired memory location number. Release the “Memory” pushbutton. The test is now stored in the selected memory location.

To retrieve the test from memory, press and release the “Memory” pushbutton, then use the rotary knob to select the desired memory location. Press and release the “Memory” pushbutton again and the desired test is now loaded.

NOTE that memory location #0 is the default location and the ECOMPACT 4 will load the test from location #0 each time it is powered up or each time a new generator is selected.

### 5.2.5 Fuse Function

The “Fuse” pushbutton activates an electronic fuse function which allows the user to set a maximum mains current level. If the set level is exceeded during the test, the ECOMPACT 4 will disconnect the mains voltage and display the message “Fuse OFF” on the display. The software fuse is designed to react to sustained overcurrents (not short duration spikes) in the same way as a fast acting mechanical fuse, but with much more precision.

For testing with DC supply voltages, the Fuse function may only be used with a maximum supply voltage of 100VDC.

When the Fuse function is used with “Dips/Interrupts” generator selected, the value should be set to the 16A default setting. With this setting, the Fuse function is delayed by 5 seconds so as not to limit any inrush currents (as required by the IEC 61000-4-11 standard).

### 5.2.6 Displayed Values

The ECOMPACT 4 uses a four line display. Lines 1 through 3 of the display show the selected test parameters. Line 4 displays (from left to right)...

- The voltage “U1” at the coupling filter input
- The voltage “U2” of the Dips/Interrupts generator (if selected)
- The mains frequency at the coupling filter input
- For AC: 16, 40, 50 or 60Hz
- For DC or no voltage applied: “asyn” (asynchronous)
- Current consumption of the EUT

### 5.2.7 Error Messages

“Emergency Stop”	Safety circuit is open. Connect the supplied safety circuit connector to the “Security Circuit / Emergency Stop” socket on the back panel of the instrument.
“Fuse OFF”	Mains current exceeded the value set using the “Fuse” function. Adjust fuse level or EUT as appropriate.
“Error, Overlapping”	Conflicting test parameters were detected in the “Dips / Interrupts” generator. The “Rep Time” must be greater than 2 x “Ramp Time” + “Interrupt Time”.

---

## 5.3 The EFT/Burst Generator

This section describes the detailed function of the ECOMPACT 4 when the “Burst Generator” is selected.

### 5.3.1 Overview

The Burst generator generates Electrical Fast Transient (EFT) Bursts as described in IEC 61000-4-4. The source impedance of the generator is 50 Ohms. The burst is a common mode transient, coupled simultaneously to all selected paths with respect to ground. The user can select between using the coaxial SHV output or the built in mains coupling network. See also Annex Fig. 4.

### 5.3.2 Coupling Path and Polarity Selection

To couple the Burst waveform to a capacitive coupling clamp or external coupling filter like the ECOUPLER4 via the SHV coaxial connector marked “Burst”, use the “Burst” pushbuttons directly above the SHV output. For positive polarity, select the Burst “+” pushbutton, and for negative polarity select the Burst “-“ pushbutton.

To couple the Burst waveform with the built in coupling / decoupling network via the European Schuko style mains connector marked “Line”, use the line “L”, protective earth “PE” and neutral “N” pushbuttons directly above the “line” output. For positive polarity, select the L, PE or N “+” pushbuttons, and for negative polarity select the L, N or PE “-“ pushbuttons. Multiple lines may be selected for simultaneous coupling as required by IEC 61000-4-4. See also Annex Fig. 5.

The polarity and coupling paths may be changed at any time before or during the test by pressing the appropriate pushbutton.

### 5.3.3 Displayed Values

Line 1>	“V0” burst voltage (0.20 to 4.20kV)	“RE” repeat time (10ms to 2.4s)
Line 2>	“FR” specified frequency (0.5 to 100kHz)	“BU” burst time/duration (0.75 to 130ms)
Line 3>	(actual frequency in kHz) - see section on “Energy Limiting below	
Line 4>	Voltages U1 / U2 (V)	Mains frequency (in Hz or “asyn”) EUT current (A)

The Burst test parameters can be changed even while a test is running by pressing the appropriate pushbutton and using the rotary control knob.

### 5.3.4 Energy Limiting

To protect the generator from overload, the energy output is limited. If certain limits are exceeded, the ECOMPACT 4 will automatically adjust the actual frequency based on the burst time and repeat time set by the user.

The ECOMPACT 4 is limited to approximately 500 spikes per burst (Spikes per burst = Spike Frequency \* Burst Time). The chart below shows the relationship between frequency and burst time in more detail.

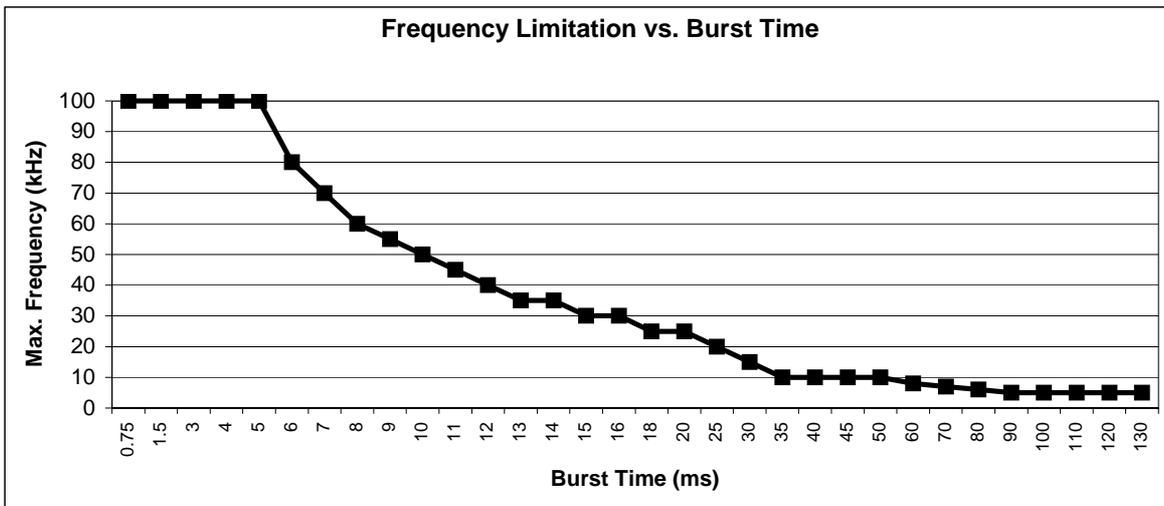


Fig. 5.4

The ECOMPACT 4 is also limited to approximately 1250 or 2500 spikes per second depending on the set voltage:  
 For burst voltage from 200V to 3000V: 2500 spikes per second  
 For burst voltage from 3020V to 4200V: 1250 spikes per second

$$\text{Spikes per second} = \text{Spikes per burst} / \text{Repeat Time} = (\text{Spike Frequency} * \text{Burst Time}) / \text{Repeat Time}$$

So the frequency set by the user may be limited depending on the chosen burst time, voltage and repeat time.

#### Example 1: 5kHz burst test according to IEC 61000-4-4

Spike Frequency: 5kHz  
 Burst Time: 15ms  
 Voltage: 4kV  
 Repeat Time: 300ms  
 Spikes per burst = 5kHz \* 15ms = 75.  
 Spikes per second = (5kHz \* 15ms) / 300ms = 250  
**Actual Frequency: 5kHz**

**Limit is 500. OK!**  
**Limit is 1250. OK!**  
**No limitation. OK!**

#### Example 2: 100kHz burst test according to IEC 61000-4-4

Spike Frequency: 100kHz  
 Burst Time: 0.75ms  
 Voltage: 4kV  
 Repeat Time: 300ms  
 Spikes per burst = 100kHz \* 0.75ms = 75. **Limit is 500. OK!**  
 Spikes per second = (100kHz \* 0.75ms) / 300ms = 250  
**Actual Frequency: 100kHz**

**Limit is 1250. OK!**  
**No limitation. OK!**

**Example 3: Spikes per burst limit exceeded**

Spike Frequency: 100kHz

Burst Time: 15ms

Voltage: 4kV

Repeat Time: 300ms

Spikes per burst =  $100\text{kHz} \times 15\text{ms} = 1500$ . **Limit is 500. Not OK!****Actual Frequency: Limited to 30kHz (450 spikes per second)****Example 4: Spikes per second limit exceeded**

Spike Frequency: 5kHz

Burst Time: 15ms

Voltage: 4kV

Repeat Time: 25ms

Spikes per burst =  $5\text{kHz} \times 15\text{ms} = 75$ .**Limit is 500. OK!**Spikes per second =  $(5\text{kHz} \times 15\text{ms}) / 25\text{ms} = 1875$ **Limit is 1250. Not OK!****Actual Frequency: Limited to 2kHz (1200 spikes per second)****5.3.5 Continuous Burst**

You can set the ECOMPACT 4 to generate a continuous burst by setting the Burst Time equal to (or greater than) the Repeat Time. Maximum continuous Burst Frequency is limited based on Burst Voltage:

For burst voltage from 200V to 3000V: 2.5kHz

For burst voltage from 3020V to 4200V: 1 kHz

If these limits are exceeded, the ECOMPACT 4 will adjust the Actual Frequency as appropriate.

**5.3.6 Starting and Stopping the Test**

Once the test parameters are set and an output path is selected, press the “Start/Stop” button to begin the test. The “Output Active” LED will illuminate.

If no output path is selected, the “Start/Stop” LED will illuminate, but no voltage will be generated or displayed, and the “Output Active” LED will not illuminate. In this case, the “Output Active” LED will illuminate and the test will begin as soon as a coupling path choice is made.

To stop the test, press the “Start/Stop” button again. The “Start/Stop”, “Output Active” and coupling path LEDs will turn off. If the output path is changed or turned off during the test, this will not automatically stop the test. The generator will continue to generate bursts until another coupling path is selected or until the test is stopped with the “Start/Stop” button.

---

**5.4 The Aux Function**

This function is not currently available.

---

**5.5 The Surge Generator**

This section describes the detailed function of the ECOMPACT 4 when the “Surge Generator” is selected.

**5.5.1 Overview**

The Surge generator generates a standard hybrid or combination wave surge as described in IEC 61000-4-5. The source impedance of the generator is 2 Ohms. See also Annex Fig. 6.

**5.5.2 Coupling Path and Polarity Selection**

The surge may be applied to the EUT directly, through an external manually operated three phase coupling filter like the Haefely ECOUPLER4, or through the built in single phase coupling filter in the ECOMPACT 4.

To apply the surge directly to the EUT or to bring the surge to an external coupler, the dual banana jack “Surge” output is used together with the “Surge +” or “Surge -” pushbuttons. The surge is always coupled to the red banana jack (High) and the black banana jack is always Common (Low). Selecting the “Surge +” pushbutton generates a positive polarity surge from red to black. Selecting the “Surge -” pushbutton generates a negative polarity surge from red to black.

To apply the surge through the built in coupler either differentially or common mode, the European Schuko style "Line" output is used together with the pushbuttons "L+", "L-", "PE+", "PE-", "N+" and "N-". The surge is always applied from the High "+" side of the generator to the Low "-" side of the generator, so in this way the polarity of the surge is also controlled by the coupling path selection.

For example, pressing the "L+" and "PE-" pushbuttons will apply a surge on the Line with respect to Earth which appears as positive polarity when measured from L to PE, and as negative polarity when measured from PE to L. Conversely, pressing the "PE+" and "L-" pushbuttons will apply a surge on Earth with respect to the Line which appears as negative polarity when measured from L to PE, and as positive polarity when measured from PE to L. This is illustrated more clearly in the table below.

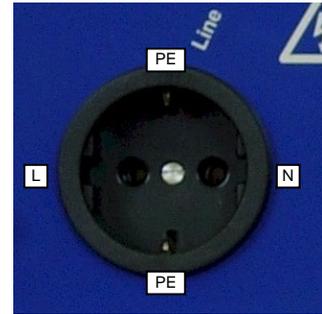


Fig. 5.5

Desired Coupling Path:	For Positive Polarity, press...	For Negative Polarity, press...
Line to Neutral	"L+" and "N-"	"L-" and "N+"
Line to Earth	"L+" and "PE-"	"L-" and "PE+"
Neutral to Earth	"N+" and "PE-"	"N-" and "PE+"

The required coupling elements (0 or 10 Ohms, 9 or 18uF) are automatically selected by the ECOMPACT 4 depending on the chosen coupling path.

The coupling paths may be changed at any time before or during the test by pressing the appropriate pushbutton. Only one coupling path may be selected at a time. Simultaneous multi-line coupling is NOT possible with the ECOMPACT 4.

See also Annex Fig. 8.

### 5.5.3 Displayed Values

Line 1>	"V0" surge voltage (0.20 to 4.20kV)	"RE" repeat time (10 to 999s)
Line 2>	"CO" impulse counter (1 to 999 surges)	"PH" phase synch (0 to 359 deg., or "---" asyn.)
Line 3>		
Line 4>	Voltages U1 / U2 (V)	Mains frequency (in Hz or "asyn")
		EUT current (A)

The Surge test parameters may NOT be changed while a test is running.

### 5.5.4 Starting and Stopping the Test

Once the test parameters are set and an output path is selected, press the "Start/Stop" button to begin the test. The "Output Active" LED will illuminate.

If no output path is selected, the "Start/Stop" LED will illuminate, but no voltage will be generated or displayed, and the "Output Active" LED will not illuminate. In this case, the "Output Active" LED will illuminate and the test will begin as soon as a coupling path choice is made.

To stop the test, press the "Start/Stop" button again. The "Start/Stop", "Output Active" and coupling path LEDs will turn off. If the output path is changed or turned off during the test, this will not automatically stop the test. The generator will remain active and resume the test program as soon as another coupling path is selected, until the test is finally stopped with the "Start/Stop" button.

### 5.5.5 AC Phase Synchronization

To superimpose or synchronize the surge onto a specific part of the AC mains supply, simply connect a suitable AC mains supply to the Coupling Input at the rear panel of the ECOMPACT 4. Then press the "Phase" pushbutton and use the rotary knob to select the synchronization position (0 to 359 degrees). To turn off AC Phase Synchronization, rotate the rotary knob part 359 degrees. The display will show "---" and Synchronization is turned off.

If no mains supply is connected to the Coupling Input at the rear panel of the instrument, the Synchronization feature will be automatically deactivated. Likewise, the Synchronization feature will be automatically deactivated if a DC supply is connected.

## 5.6 The Dips / Interrupts / Variations Generator

This section describes the detailed function of the ECOMPACT 4 when the “Dips / Interrupts Generator” is selected.

### 5.6.1 Overview

The Dips / Interrupts generator produces voltage dips, interrupts and variations as described in the IEC 61000-4-11 and IEC 61000-4-29 standards. ECOMPACT 4 can handle the 500A inrush current requirement as specified by the IEC 61000-4-11 standard.

To generate Dips and Interrupts, the generator uses a VMOS switch to quickly switch between the voltage levels U1 and U2. The power supply connected to the Coupling Input on the rear panel of the instrument is considered U1. The Dip voltage U2 is produced by a step transformer inside the generator, or by an external variac (optional).

To generate Variations, the internal step transformer is bypassed and an external variac (optional) is used. The external variac may be manually operated, or controlled via the “Control Output” at the rear panel of the ECOMPACT 4.

Haefely model PEV1610 is a motorized external 16A variac designed specifically for use with the ECOMPACT 4. For more information, consult your local Haefely representative.

### 5.6.2 Rear Panel Connections

When using the internal step transformer to produce the Dip voltage U2, the Coupling Input at the rear panel should be connected to the Internal Transformer input using the two supplied jumpers as shown in Annex Fig. 2 “Connection set-up for internal step transformer” and Annex Fig. 9 “Connection of internal Dips transformer”.

When using an external transformer such as Haefely model PEV1610 to generate the Dip voltage U2, the jumpers are not used and instead the external variac is connected to the U1 (L, N and PE) and U2 sockets as shown in Annex fig. 10 “Connection of an external regulation transformer to the ECOMPACT 4”.

### 5.6.3 Displayed Values

<b>Line 1&gt;</b>	“V0” dip voltage U2 (0 to 127% of input voltage U1)	“RE” repeat time (0 to 99.9ms / 9.99s / 999s)
<b>Line 2&gt;</b>	“CO” event counter (1 to 999 events or “---” continuous)	“PH” phase synch (0 to 359 deg., or “---” asyn.)
<b>Line 3&gt;</b>	“RA” ramp time for variations (0 to 9.99s / 999s)	“IN” interrupt time (0 to 99.9ms / 9.99s / 999s)
<b>Line 4&gt;</b>	Voltages U1 / U2 (V)	Mains frequency (in Hz or “asyn”) EUT current (A)

### 5.6.4 Selection of Test Parameters

The time parameters have multiple ranges. To toggle between ranges, press the “Repeat Time”, “Interrupt” or “Ramp” pushbutton to highlight that parameter, then push the “Frequency” pushbutton until the desired time range is highlighted on the display. Then use the rotary knob to adjust the value as usual.

The Repeat Time must be greater than the Interrupt Time, otherwise the error message “Error – Overlapping” will appear on the display.

For Dips and Interrupts testing, the Ramp Time should be set to 0.

Set Counter to 0 for continuous operation

For Variations testing, the Ramp Time must be set to a reasonable value based on the variable voltage source. For example, it is possible to set a Ramp Time of 0.05s on the ECOMPACT 4 without any error message, but this Ramp Time is physically impossible for example for a motorized variac. If no external variable voltage source is connected, the generator will ignore any Ramp Time setting.

While any Dip Voltage may be set on the display, the fixed Dip levels of the built in step transformer are 0%, 40%, 70% and 80% in accordance with IEC 61000-4-11. If the user enters a Dip voltage within +/- 10% of the fixed Dip levels, the generator will automatically use the nearest fixed Dip level. However, if the user enters a value outside this +/- 10% range, the Dip Voltage will automatically be set to 100% (full interrupt, U2=0V).

User selected Dip Voltage on display:	Actual Dip Voltage used by generator:
0% to 30%	100%
31% to 50%	40%
51% to 60%	100%
61% to 75%	70%
76% to 90%	80%
91% to 127%	100%

The Dips / Interrupts / Variations test parameters may NOT be changed while a test is running.

## 5.7 The Magnetic Field generator

This section describes the detailed function of the ECOMPACT 4 when the “Power Frequency Magnetic Field Generator” is selected.

### 5.7.1 Overview

The Magnetic Field generator is used together with the 1m x 1m model MFS100 magnetic field coil to produce power frequency magnetic fields for immunity testing as described in the IEC 61000-4-8 standard.

In this mode, the generator uses the dip voltage U2 set by the user to drive the magnetic field coil. The user adjusts the “Interrupt Time” to set the total ON time for the test.

### 5.7.2 Displayed Values

Line 1>	“V0” output voltage U2 (0 to 127% of input voltage U1)	“RE” repeat time (0 to 99.9ms / 9.99s / 999s)
Line 2>	“CO” event counter (1 to 999 events or “---“ continuous)	“PH” phase synch (0 to 359 deg., or “---“ asyn.)
Line 3>	“RA” ramp time for variations (0 to 9.99s / 999s)	“IN” interrupt time (0 to 99.9ms / 9.99s / 999s)
Line 4>	PFM / U2 (V)	Mains frequency (in Hz or “asyn”) EUT current (A)

### 5.7.3 Selection of Test Parameters

The time parameters have multiple ranges. To toggle between ranges, press the “Repeat Time”, “Interrupt” or “Ramp” pushbutton to highlight that parameter, then push the “Frequency” pushbutton until the desired time range is highlighted on the display. Then use the rotary knob to adjust the value as usual.

The Repeat Time must be greater than the Interrupt Time, otherwise the error message “Error – Overlapping” will appear on the display.

Set Counter to 0 for continuous operation

For Variations testing, the Ramp Time must be set to a reasonable value based on the variable voltage source. For example, it is possible to set a Ramp Time of 0.05s on the ECOMPACT 4 without any error message, but this Ramp Time is physically impossible for example for a motorized variac. If no external variable voltage source is connected, the generator will ignore any Ramp Time setting.

While any Dip Voltage may be set on the display, the fixed Dip levels of the built in step transformer are 0%, 40%, 70% and 80% in accordance with IEC 61000-4-11. If the user enters a Dip voltage within +/- 10% of the fixed Dip levels, the generator will automatically use the nearest fixed Dip level. However, if the user enters a value outside this +/- 10% range, the Dip Voltage will automatically be set to 100% (full interrupt, U2=0V).

User selected Dip Voltage on display:	Actual Dip Voltage used by generator:
0% to 30%	100%
31% to 50%	40%
51% to 60%	100%
61% to 75%	70%
76% to 90%	80%
91% to 127%	100%

The Dips / Interrupts / Variations test parameters may NOT be changed while a test is running.

# 6 Software

## 6.1 Overview

The EMV-Check software package included with the ECOMPACT 4 allows the user to control the ECOMPACT 4 and ECOUPLER4 from a PC and create basic automated routines and test reports. The software is supplied on diskette and is compatible with all Windows 9X/00 versions.

Automated tasks and routines are constructed using command lines that are executed sequentially by the generator. The generator can also be operated manually during these routines which allows the user to choose between the convenience of full automation, and the flexibility of semi-automatic operation. The user can also incorporate simple text displays with instructions or messages to prompt the operator and speed along the test process.

Test reporting / data logging is performed independently from the task automation, and can even be done if the generator is being operated manually. Once the generator is started, all results and modifications will be registered in the protocol along with their time of occurrence. The operator can choose which test parameters are included in the protocol and can insert comments at any time, allowing for user-customization of the test report. Protocol files are saved in a \*.RTF format to allow further modification by the user with MSWord or other test editors.

## 6.2 Installation

To install the EMC-Check software, insert the floppy disk into the drive and start the installation program SETUP.EXE.

After the installation, you can run the "Choose Language" program to select either English or German as the primary language. Once a selection is made, this becomes the default language for the EMV-Check software.



Fig. 6.1

## 6.3 Connection to the ECOMPACT 4 generator

Use the supplied cable to connect the interface port at the rear panel of the ECOMPACT 4 to the serial port of your PC. The standard configuration is RS232, however the more noise resistant RS485 interface is available with an optional interface converter.

## 6.4 Basic terms

### 6.4.1 Automation file, automation window

The automation file contains all the data for the automated task control. Each data record in this file is referred to as a "line". These data lines are viewed in the automation window. Automation files can be named and saved by the user, but the file extension is selected automatically by the EMV-Check software as follows:

Burst Generator tests:	*.FBN and *.TBN
Surge Generator tests:	*.FHY and *.THY
Dips / Interrupts tests:	*.FNU and *.TNU

### 6.4.2 Protocol file, protocol window

The protocol lines from the test in progress are stored in a protocol file and displayed in protocol window. The protocol file can be named and saved by the user, and the file extension \*.RTF rich text format is automatically selected by the EMV-Check software. The size of the protocol file is limited, so if the limit is exceeded the EMV-Check software will create multiple protocol files with a one digit extension (e.g. protocol1.rtf, protocol2.rtf, protocol3.rtf, etc.).

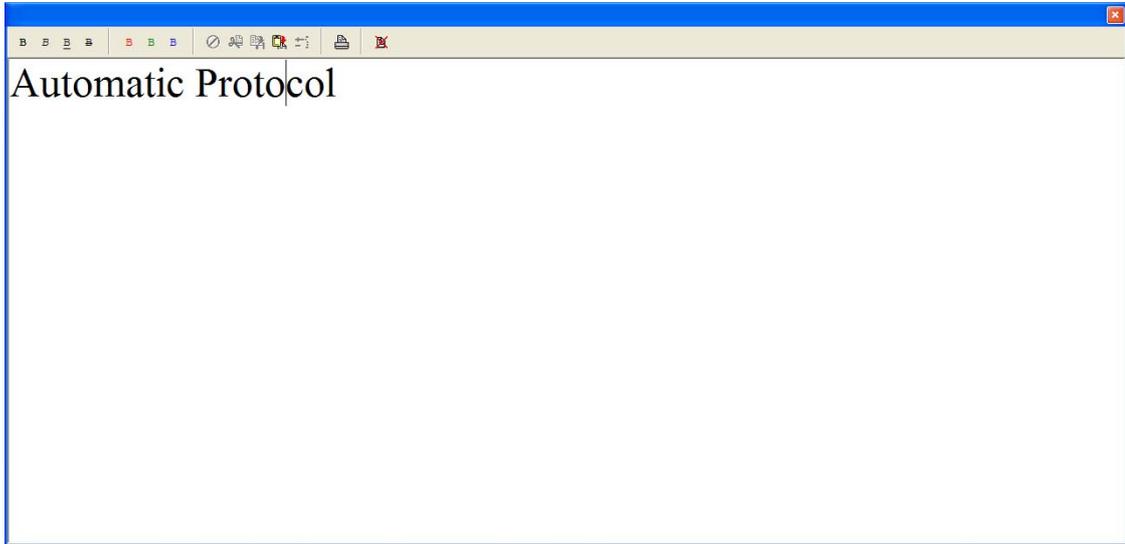


Fig 6.2: The protocol window

### 6.4.3 Selecting the Generator

The ECOMPACT 4 allows the user to select between the EFT/Burst generator, the Surge generator, the Dips/Interrupts generator, and the Magnetic Field generator. In the EMV-Check software, these generators are referred to by a three-letter code, as follows:

Burst Generator:	BNG
Surge Generator:	HYG
Dips / Interrupts and Magnetic Field Generators:	NUG

Selection of the active generator is made by clicking the appropriate button in the EMV-Check software toolbar:

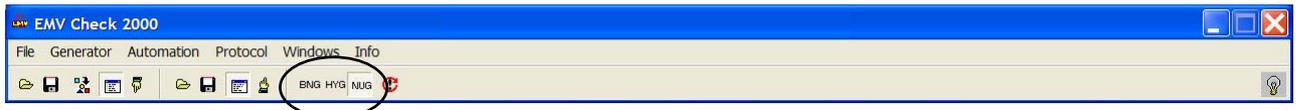 


Fig. 6.3

### 6.4.4 Other functions

**Start** starts the first line of the automation file as displayed in the automation window.

**Pause** stops the execution of the automation file as soon as the line in process has reached its end. Once the execution stops, the user can cancel the automation entirely or restart the automation at any line desired.

**Single Step** executes the active line only. The active line is marked in the automation window. After execution of the active line the system will be set to **pause** mode.

**Stop** causes an immediate stop of the automation. After a stop, the user must start the automation again beginning at the first line. The automation may also be stopped and started at any time using the START/STOP button **on the ECOMPACT 4 generator**.

**Go to** starts the automation from the active line and continues to the end of the automation.

## 6.5 The EMV-Check screen

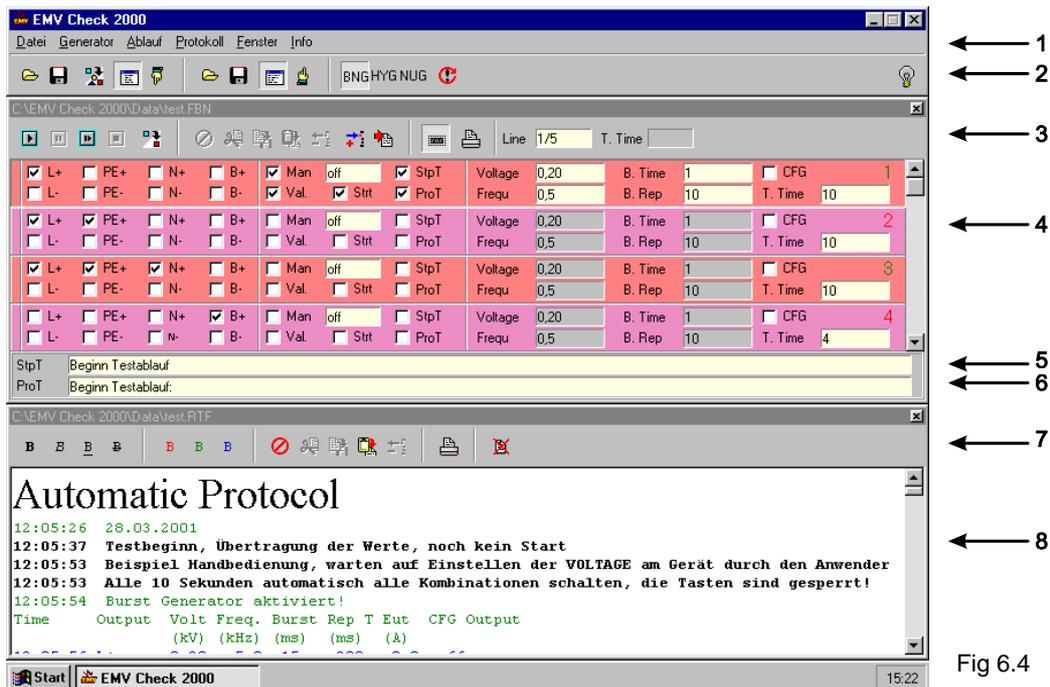


Fig 6.4

- 1.) Menu bar
- 2.) Icon bar
- 3.) Automation window, icon bar
- 4.) Automation window, data records
- 5.) Automation window, stop text
- 6.) Automation window, protocol text
- 7.) Protocol window, icon bar
- 8.) Protocol window, editor

## 6.6 Menu Bar



Fig 6.5

### 6.6.1 File Menu

In the File menu, the user can start a **new** test routine, **save** automation and protocol files, and **load** previously saved automation and protocol files. The user can also **insert** all the lines from a previously saved automation file into the current application directly after/behind the active line.

The **printer setup** function is also in the File menu.

### 6.6.2 Generator menu

In the Generator menu, the user selects the active generator – **Burst**, **Surge** or **Voltage Interruptions**. When using the ECOMPACT 4, **Combi** should always be selected as opposed to **Single**. The generator may also be selected with the function keys F6, F7, F8, or with the BNG, HYG and NUG buttons on the menu bar.

**Reset** returns the selected generator to its default condition.

### 6.6.3 Automation menu


In this menu, the user can **start**, **pause** and **stop** a test, or move by a **single step** through the automation protocol. These functions are also available by using the assigned function keys or with the corresponding buttons at the top of the automation window.

Also in the Automation Menu are the **options** for the Automation Window such as color, beep on/off, text attributes (underline, bold, italic, etc.), and which test parameters may be selected.

The user can also **print** the automation lines from this menu.

#### 6.6.4 Protocol menu

In the Protocol menu, the user can use the **on** command to start and stop recording the protocol, or insert a **comment** in the protocol (the protocol recording is temporarily stopped when the user enters a comment, and must be turned back on when the user finishes entering comments).

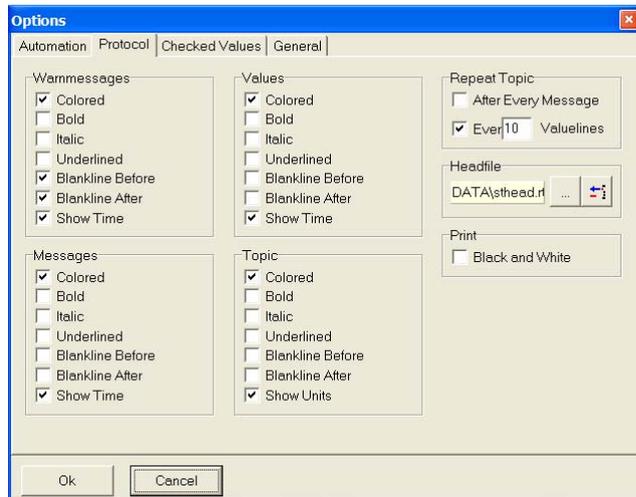

Also in the Protocol menu are the **options** for the Protocol Window such as color, button styles, text attributes (underline, bold, italic, etc.), and which test parameters are recorded and displayed.

Under the Protocol tab, the user can also select a \*.RTF format header file that will automatically print at the top of the Protocol. This is useful to insert for example a company logo at the top of the test report.

Fig 6.6

The user can also **print** the protocol from this menu.

Most of these functions can also be accessed with the appropriate function keys or with the corresponding buttons at the top of the Protocol Window.

#### 6.6.5 Window menu

The Window menu allows the user to choose which windows are displayed on the screen.

#### 6.6.6 Info menu

The Info menu shows the EMV-Check software version.

## 6.7 Icon Bar



Fig 6.7

Icons for the more common functions are displayed on the Icon Bar in three groups. From left to right, these are:

### *Automation file commands:*

- Load automation file
- Save automation file
- Insert automation file behind active line
- Automation window on/off
- Raise automation window to front

### *Protocol file commands:*

- Load protocol file
- Save protocol file
- Protocol window on/off
- Raise protocol window to front

### *Generator controls:*

- BNG select burst generator
- HYG select surge generator
- NUG select Dips/Interrupts generator
- Restart generator

The light bulb icon at the far right indicates the status of the serial connection to the generator. Green signals a good serial connection, red indicates a communication failure. An unlit bulb shows there is no communication activity (e.g. after the test stops).

## 6.8 Automation window

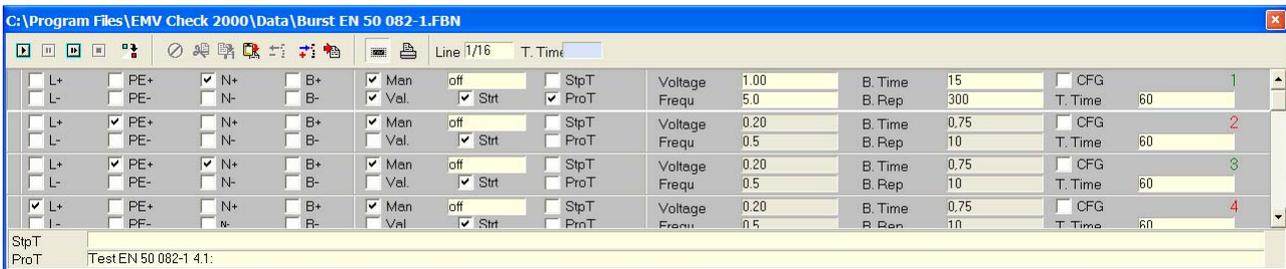


Fig. 6.8: The automation window

### 6.8.1 Automation window icon bar



Fig 6.9

Icons for the more common Automation Window functions are displayed at the top of the Automation Window in four groups.

The first group is automation control icons. These are used to control the progress of the test, and they are from left to right:

- Start
- Pause
- Single step
- Stop
- Go to / skip

The next group are functions for creating and editing automation control lines:

- Undo

- Cut
- Copy
- Paste
- Delete
- Insert line
- Copy active line

The remaining icons are:  
 Text display on/off  
 Print file

“Line” shows the active line number corresponding to the numbered test lines in the Automation Protocol. Clicking on the “Line” icon allows the user to jump to a specific line number if desired.

The last icon is either “T. Time” (elapsed test time) or “Counter” (number of events remaining) depending on which generator is selected.

### 6.8.2 Test lines in the Automation Window

Each test line in the Automation window contains the commands for a single automation cycle for the generator selected. Test lines are numbered on the far right hand side of the window and are executed sequentially by the EMV-Check software.

Before an operation can be carried out on a given test line (or lines), it must first be selected as active. To select an active line, move the mouse cursor to the leftmost part of the desired line. The cursor will change to a “+” sign. Clicking the mouse selects the entire line and the line now appears highlighted. To unmark a line, repeat this procedure. To mark more than one line, repeat this procedure for each line individually.



Fig 6.10

Test lines are divided into three sections. In the left section, the user selects the output characteristics of the generator such as coupling path and polarity for the EFT and surge generators, and ramp characteristics for the Dips/Interrupts generator. The software checkboxes are the same as the pushbuttons on the ECOMPACT 4 instrument and are used in the same way. If the user makes an incorrect selection, the EMV-Check software will automatically correct it.

In the middle section, the user has the following options:

“**Man**” indicates manual operation of the ECOMPACT 4 generator. When this is selected, the generator is controlled from the front panel of the instrument and cannot be controlled from the software. If “Man” is not selected, the generator can be controlled only from the software. However, for safety reasons, the “Start/Stop” button on the ECOMPACT 4 front panel are always active, even when the unit is software-controlled.

“**Val**” sends the values in the Test Line to the generator before starting the test. If the “Val” button is not selected, the test will be run with the default generator settings. This feature is included to prevent the software from overwriting particular settings that the user may have already programmed manually into the ECOMPACT 4.

When “**Strt**” is selected, the software will automatically run the test line when the automation routine is run. If “Strt” is not selected, the automation routine will wait for the user to press the “Start/Stop” button on the front panel of the ECOMPACT 4.

When the “**StpT**” StopText button is selected, the software will display a message that must be acknowledged by the user before the test will begin. The user can enter the desired StopText message in the “StpT” field at the bottom of the Automation Window.

When the “**ProT**” ProtocolText button is selected, the software will insert a user-defined message into the test protocol in the Protocol Window. The user can enter the desired ProtocolText message in the “ProT” field at the bottom of the Automation Window. This is useful for inserting a text message in the final test report that describes the

test line being run. With the “ProT” button deactivated, the user can also use the “ProT” ProtocolText field to insert comments while the test is running.

In the right section of the Test Line, the user selects the test parameters for the generator such as voltage, event time, phase, etc. When a parameter is selected, a pop-up window appears and the user can either manually type in the desired value or adjust the slider control with the mouse or arrow keys. Click OK to confirm the entry, or Next to adjust the value on the next Test Line. In some cases (eg. when setting time parameters on the Dips/Interrupts generator) a second vertical sidebar will appear. This sidebar controls the time scale (eg. 0.0ms, 0.00s, 00.0s).

When using the ECOMPACT 4 together with the ECOUPLER4 three phase coupling network, activate the “CFG” button to turn on three phase coupling options. The ECOUPLER4 is manually operated, so the EMV-Check software will not automatically change coupling paths, but it will adjust the test protocol so the correct three phase test results are shown.

## 6.9 Protocol Window

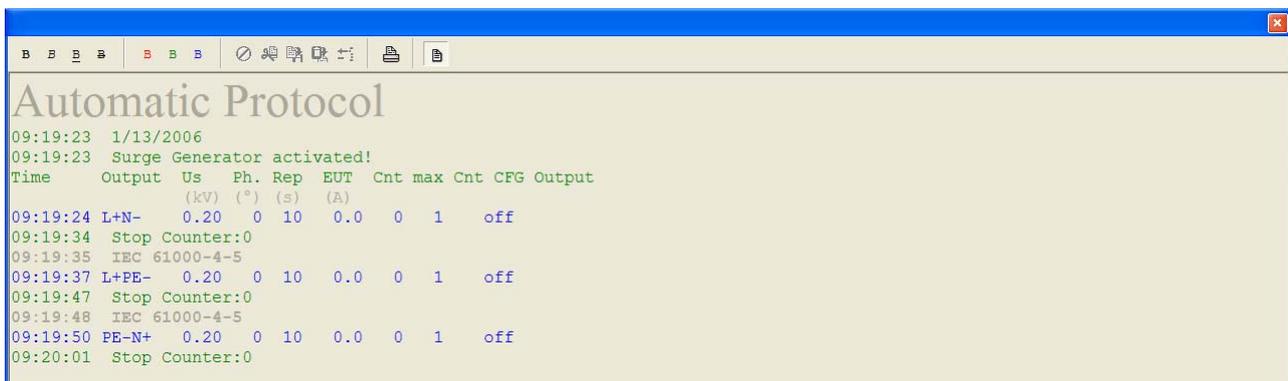


Fig 6.11

### 6.9.1 Protocol window icon bar

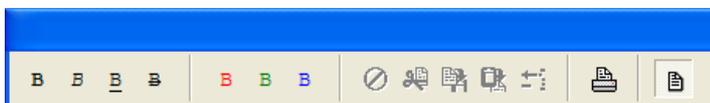 


Fig 6.12

Icons for the more common Protocol Window functions are displayed at the top of the Protocol Window in four groups.

The first and groups are text format icons.

- Bold
- Italic
- Underline
- Strikethrough

- Set color for warning text
- Set color for informational text
- Set color for test results text

The next group are functions for creating and editing lines in the protocol:

- Undo
- Cut
- Copy
- Paste
- Delete

The remaining icons are:

- Print file
- Protocol on/off

### **6.9.2 Editing text in the Protocol Window**

When the Protocol is turned off, it is no longer recording test events and the user can then edit text in the Protocol Window just like any other word processing program. The Protocol File is saved in the \*.RTF rich text format, so it may also be exported and edited in other programs like MSWord or WordPerfect.

### **6.9.3 Automatic protocols**

The EMV-Check software will automatically insert certain data into the protocol such as time, date, and generator data. It will also automatically insert certain error and status messages like “No Connection”, “Emergency-Off”, “Stop”, etc.

# 7 Service

## 7.1 Maintenance

### 7.1.1 Cleaning

**Remove the mains and all other cables from the instrument.** The front panel, case and rear panel can be cleaned with a damp, lightly soaped cloth.

### 7.1.2 Fuses

This instrument has two 1A or 2A fuses at the mains power input and a 16A fuse at the power input of the coupling network on the rear panel of the instrument. Be sure to disconnect mains power from the instrument before changing the fuses.

## 7.2 Failure Diagnoses and Handling

### 7.2.1 Error Reports

Error Report	Description / Action
"Emergency Stop"	Safety circuit is open. Ensure safety circuit plug is fitted to the security socket on the rear panel. Ensure all additional switches connected to the safety circuit (gate switch, etc.) are closed.
"Fuse Off"	Measured EUT current exceeded the user selected fuse value. The software fuse can be reset by pressing the FUSE button. To extend the life of the disconnect relay, it is recommended that any short circuit be cleared before resetting the fuse.
"Error, Overlapping"	Certain test parameters conflict. For example, during Dips / Interrupts testing, the Rep Time must be greater than the Interrupt Time.

## 7.3 Verification

In addition to the calibration service offered by your Haefely Test Service center, it is also possible to verify the generator outputs at the user site.

### 7.3.1 EFT Verification

The Haefely EFT Verification Kit includes a 50 Ohm and 1000 Ohm attenuator as required by the IEC 61000-4-4 standard. The appropriate attenuator is fitted to the "Burst" coaxial output, and an oscilloscope is then connected to the output of the attenuator. For measuring the waveform at the output of the coupling filter, single phase and three phase adapters are available. For more information on the EFT Verification Kit, consult your local Haefely representative.

NOTE: Be sure to disconnect mains power from the Coupling Input before connecting the measuring attenuators. Measuring attenuators are designed for burst voltages only and will be destroyed if subjected to AC/DC voltage.



Fig. 7.1

### 7.3.2 Surge Verification

The Haefely PDP8000 is a differential impulse measurement probe that can be used to measure surge pulses instead of the cumbersome traditional method of aligning dual probes. Two banana plug cables are provided as the High and Common inputs to the PDP8000, and a coaxial output is provided for connection to an oscilloscope. The divider ratio is 1000:1 and the PDP8000 is rated up to 8kV for surge, 690VAC or 400VDC. For more information on the PDP8000, consult your local Haefely representative.



Fig. 7.2

---

## 7.4 Replacement Parts

Please consult your local Haefely sales or service representative.

---

## 7.5 Customer Service

Please feel free to contact your local Haefely representative for any of the following needs:

- New product information
- Accessories
- Replacement parts
- Technical questions
- Equipment calibration
- Equipment repair

Haefely has three sales and service locations, plus dozens of local representatives throughout Europe, Asia and North America.

For the most up to date list of sales representatives, please consult our website at [www.haefelyEMC.com](http://www.haefelyEMC.com).

# 8 Accessories and Options

---

## 8.1 Accessories

The ECOMPACT 4 is delivered with the following standard accessories:

- 1 User manual
- 1 Safety circuit connector
- 1 Equipment mains cable 10A
- 1 EUT supply mains cable 16A
- 1 RS232 communication cable
- 2 Internal dips transformer jumpers
- 10 Spare fuses 16A F for EUT supply
- 1 EMV-Check software diskette
- 1 Test certificate

---

## 8.2 Options

Description	Ordering No
<b>ECOUPLER 4</b> 3 phase external coupling / decoupling network, 16A/440V AC.	<b>249101</b>
<b>MFS 100</b> Magnetic field set according to IEC 61000-4-8 up to 100A/m and IEC 61000-4-9 up to 1000A/m	<b>249102</b>
<b>PEV 1610</b> motorized external variac 16A single phase For IEC 61000-4-11 edition 1 compliance testing and IEC 61000-4-11 edition 2 precompliance testing	<b>249103</b>
<b>PESD 1610</b> ESD gun up to 16.5kV	<b>249962</b>
<b>IP4A</b> capacitive coupling clamp	<b>249130</b>
<b>PCD 121</b> data line coupling network symmetrical	<b>249801</b>
<b>PCD 126A</b> data line coupling network asymmetrical	<b>249803</b>
<b>EFT VERIFICATION SET</b>	<b>249995</b>
<b>EFT VERIFICATION ADAPTER</b> for ECOMPACT 4 (single phase)	<b>249104</b>

## 9 Corrections and Additions

---

### 9.1 Addresses

#### 9.1.1 Headquarter Switzerland

e-Mail: EMC-support@haefely.com

Address: Haefely Test AG  
Haefely EMC Division  
Lehenmattstrasse 353  
CH-4052 Basel / Switzerland

Telephone : + 41.61.373 41 11

Fax : + 41.61.373 49 12

Internet: www.haefelyEMC.com

#### 9.1.2 North America Office

e-Mail: EMC-support@haefely.com

Address: Hipotronics Inc.  
Haefely EMC Division  
1650 Route 22  
Brewster, NY 10509 / USA

Telephone : +1 845 279 3644 x262

Fax : +1 845 279 2467

Internet: www.haefelyEMC.com

#### 9.1.3 China Representative Office

e-Mail: EMC-support@haefely.com

Address: Haefely Test AG Representative Office  
8-1-602, Fortune Street  
No.67, Chaoyang Road, Chaoyang District  
Beijing 100025  
Peoples Republic of China

Telephone : ++86 10 8578 8099/8199/8299

Fax : ++86 10 8578 9908

Internet: www.haefelyEMC.com

#### 9.1.4 Manufacturer

e-Mail: EMC-sales@haefely.com

Address: Haefely Test AG  
Haefely EMC Division  
Lehenmattstrasse 353  
CH-4052 Basel / Switzerland


Telephone : + 41.61.373 41 11

Fax : + 41.61.373 49 12


Internet: www.haefelyEMC.com

## 9.2 Annex 1 to 11


### 9.2.1 Safety circuit diagram Fig.1

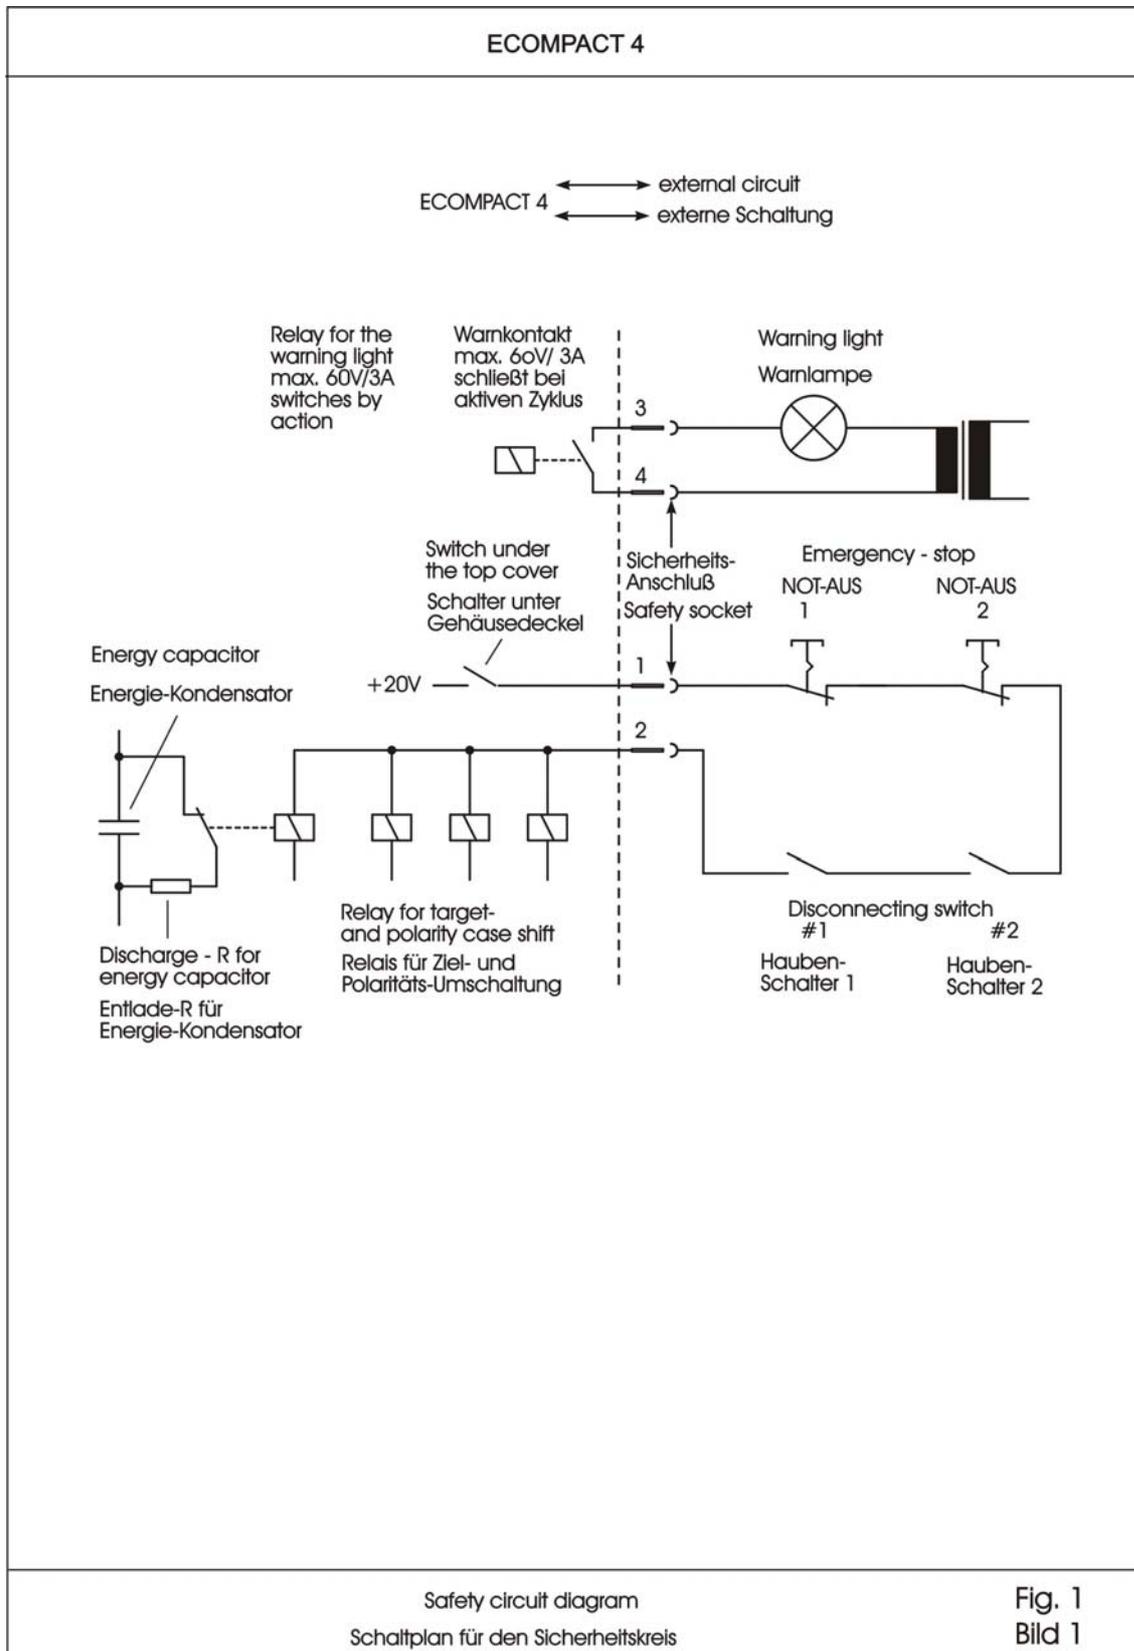


**9.2.2 Rear panel connections Fig.2**

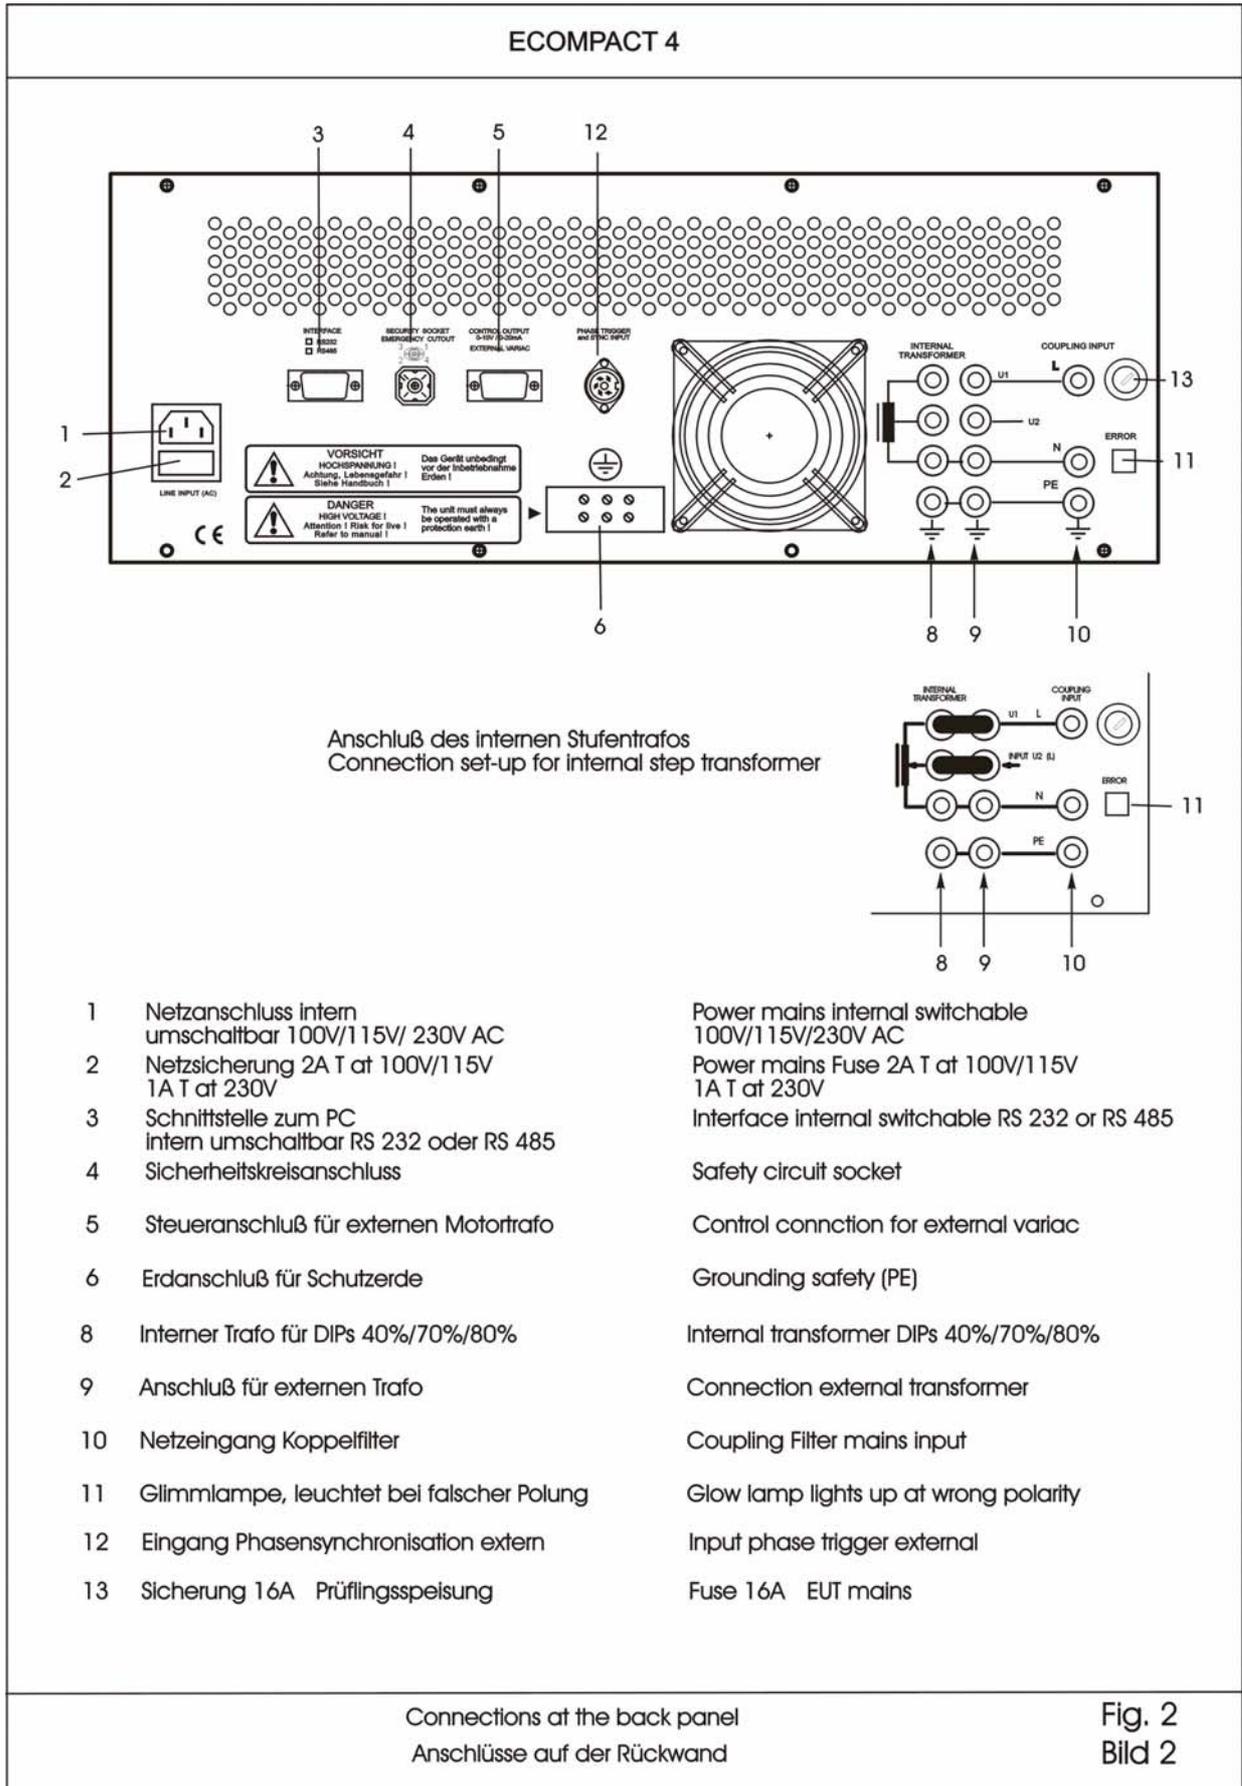


9.2.3 Interface to PC Fig.3

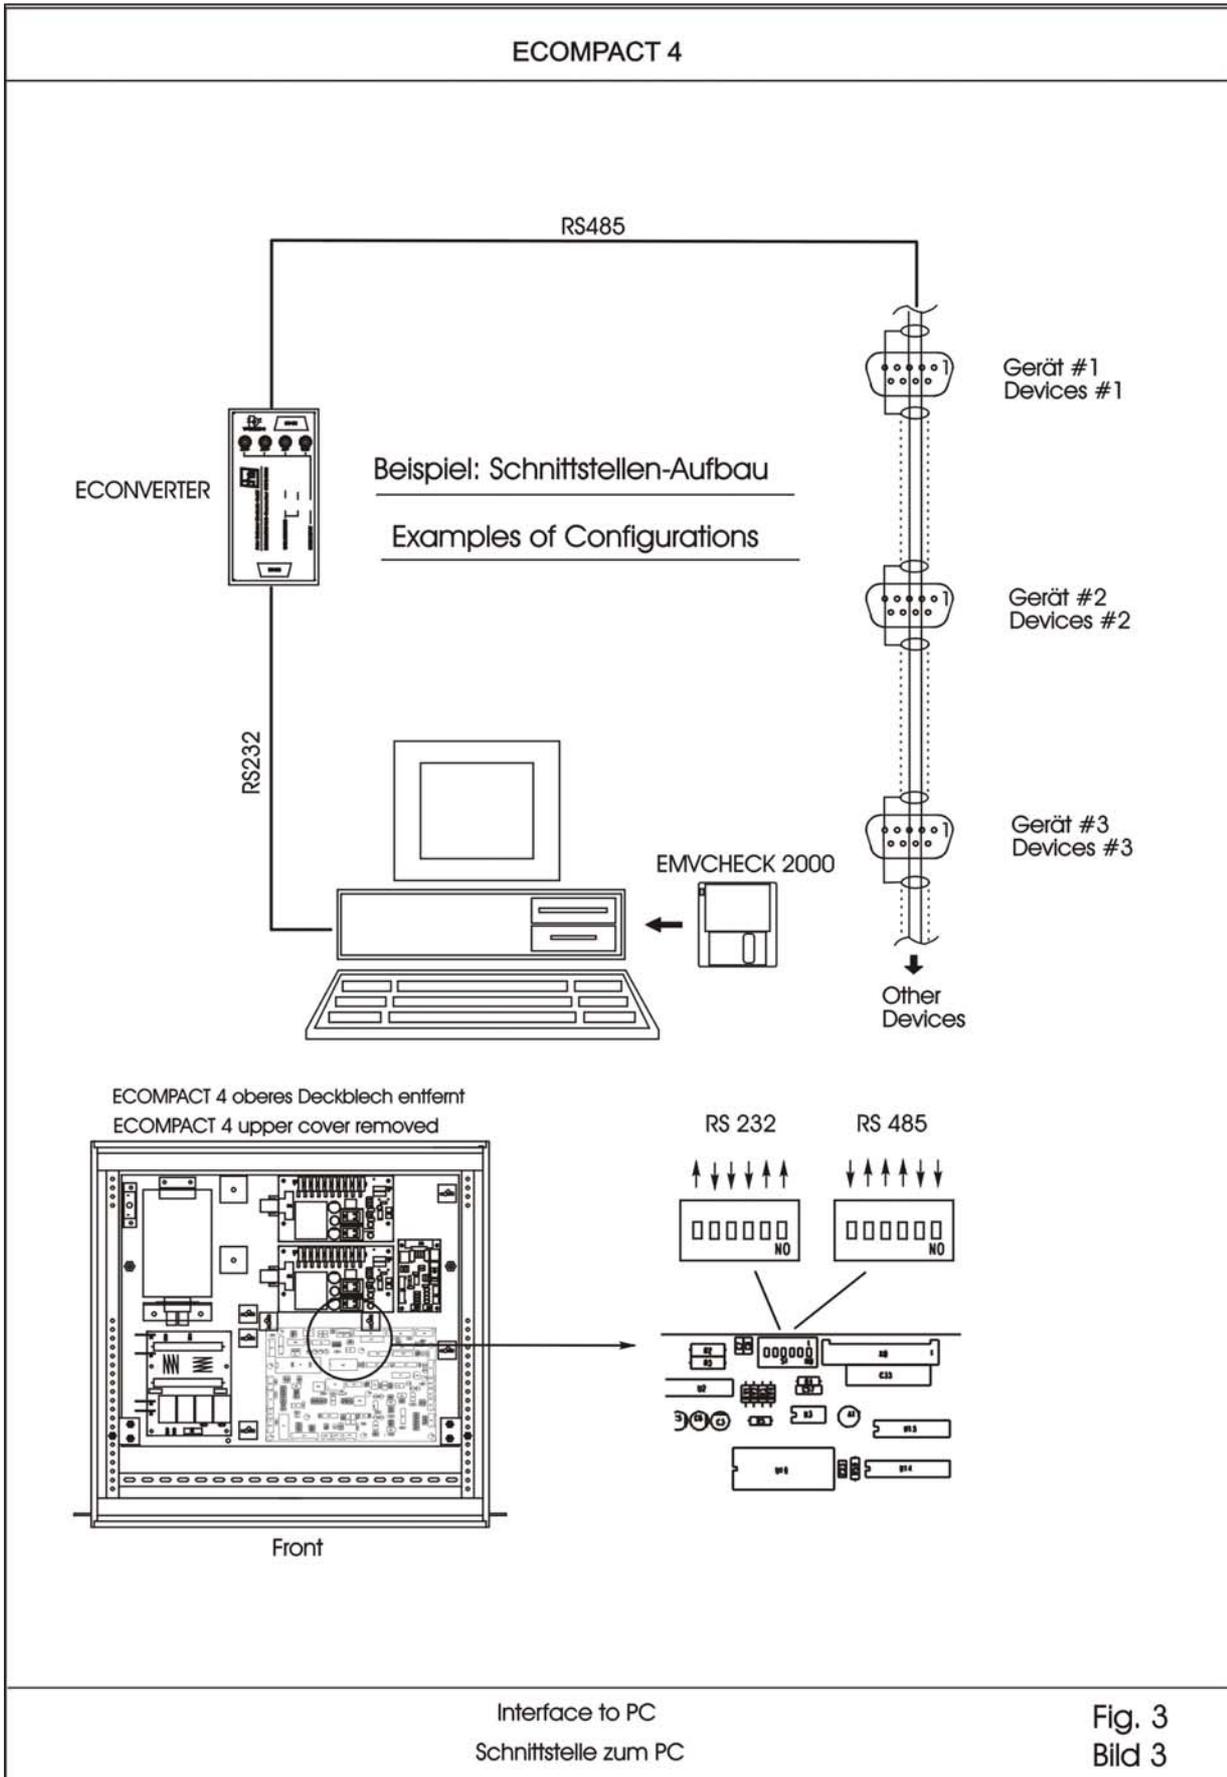


9.2.4 Burst generator output Fig.4

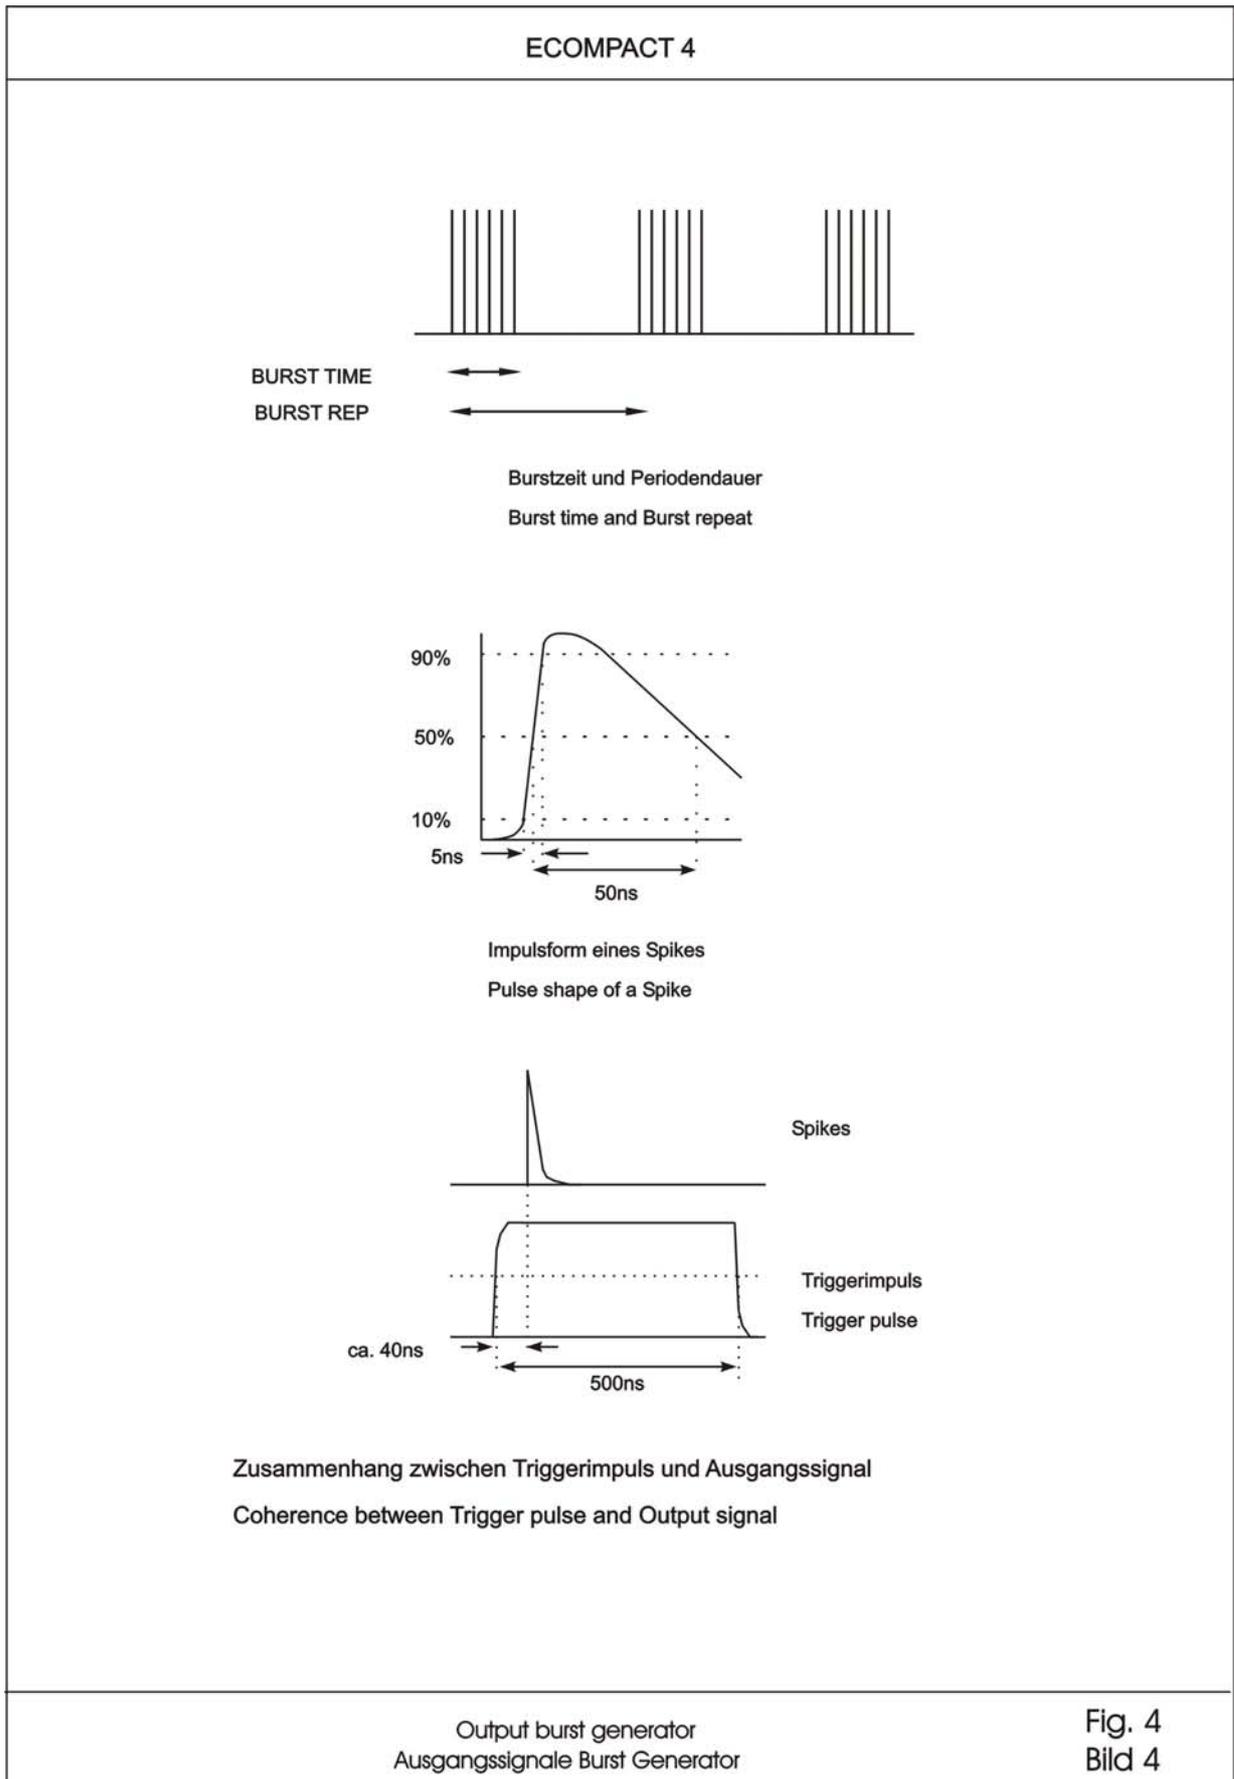


9.2.5 Burst generator coupling example Fig.5

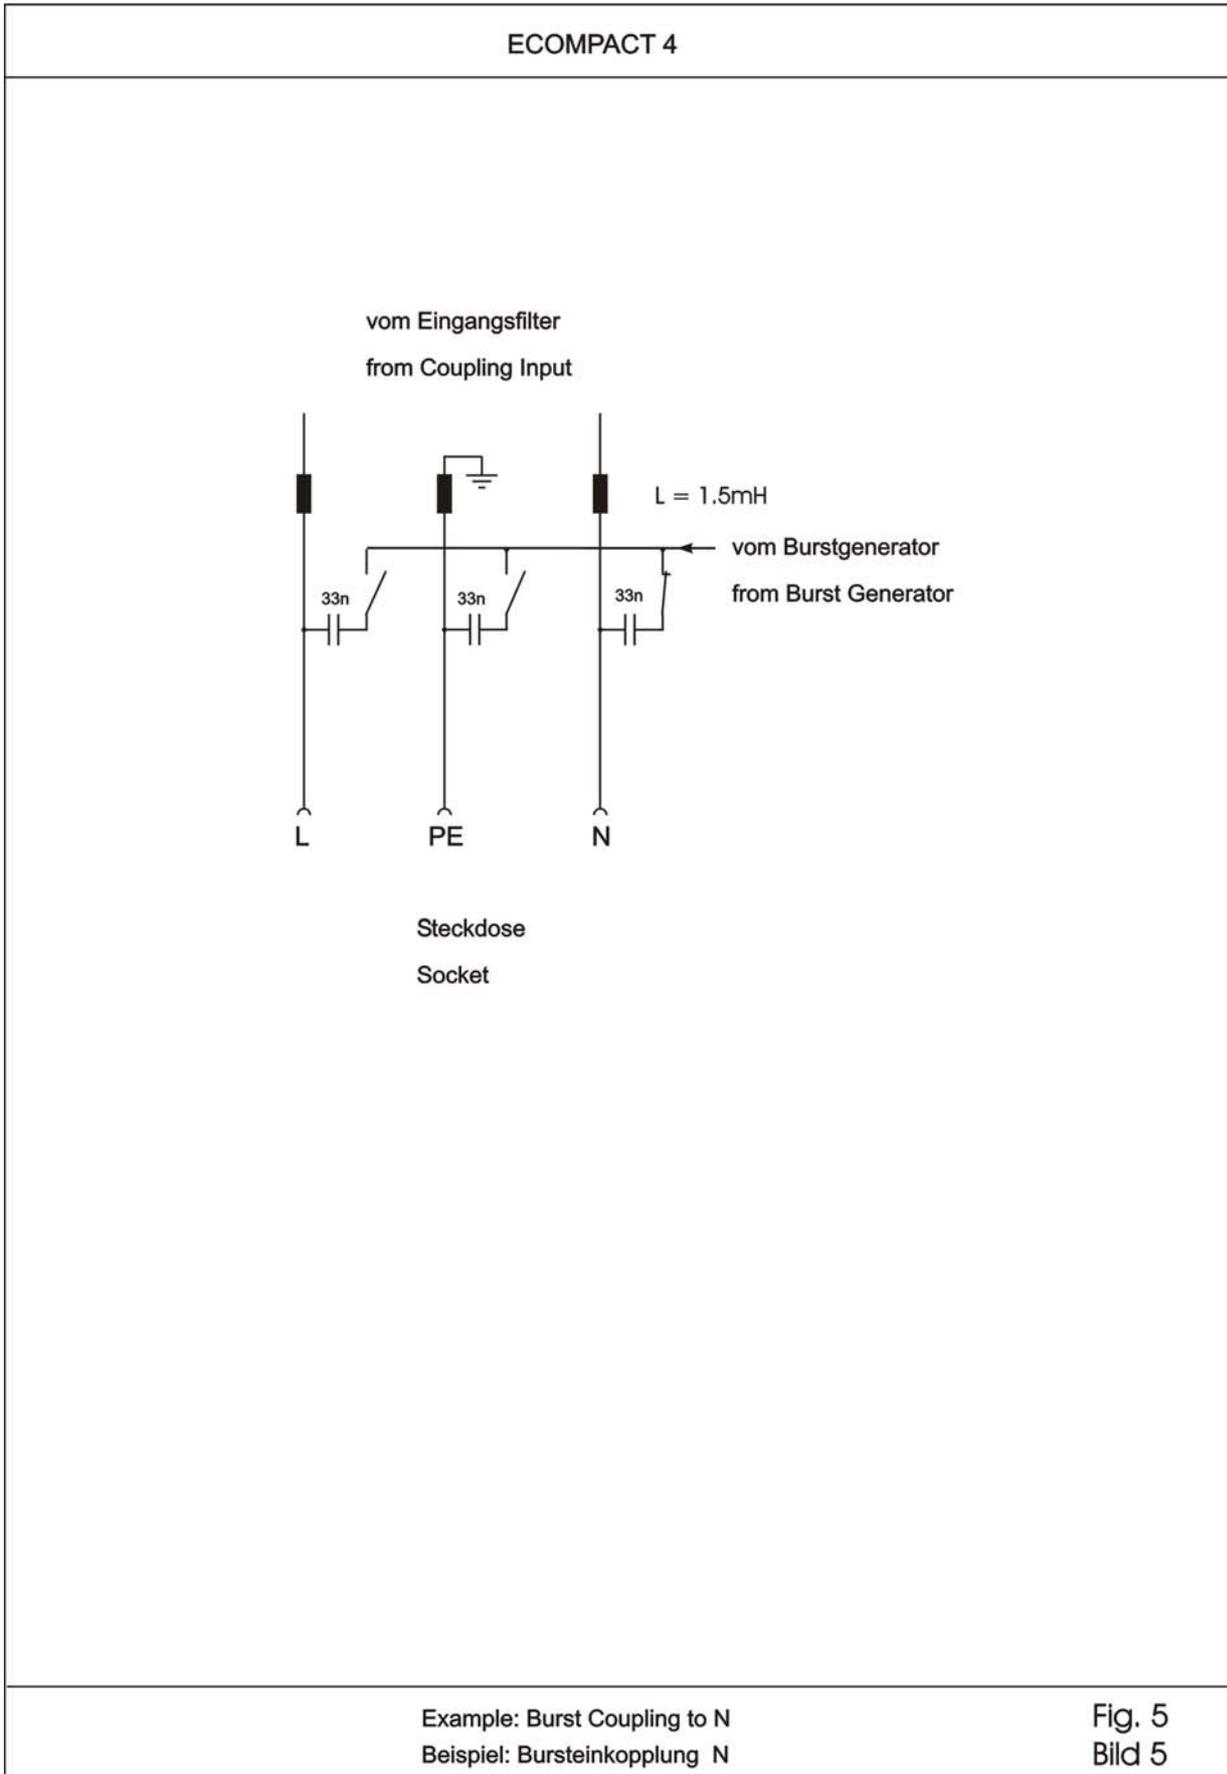


9.2.6 Surge generator output Fig.6

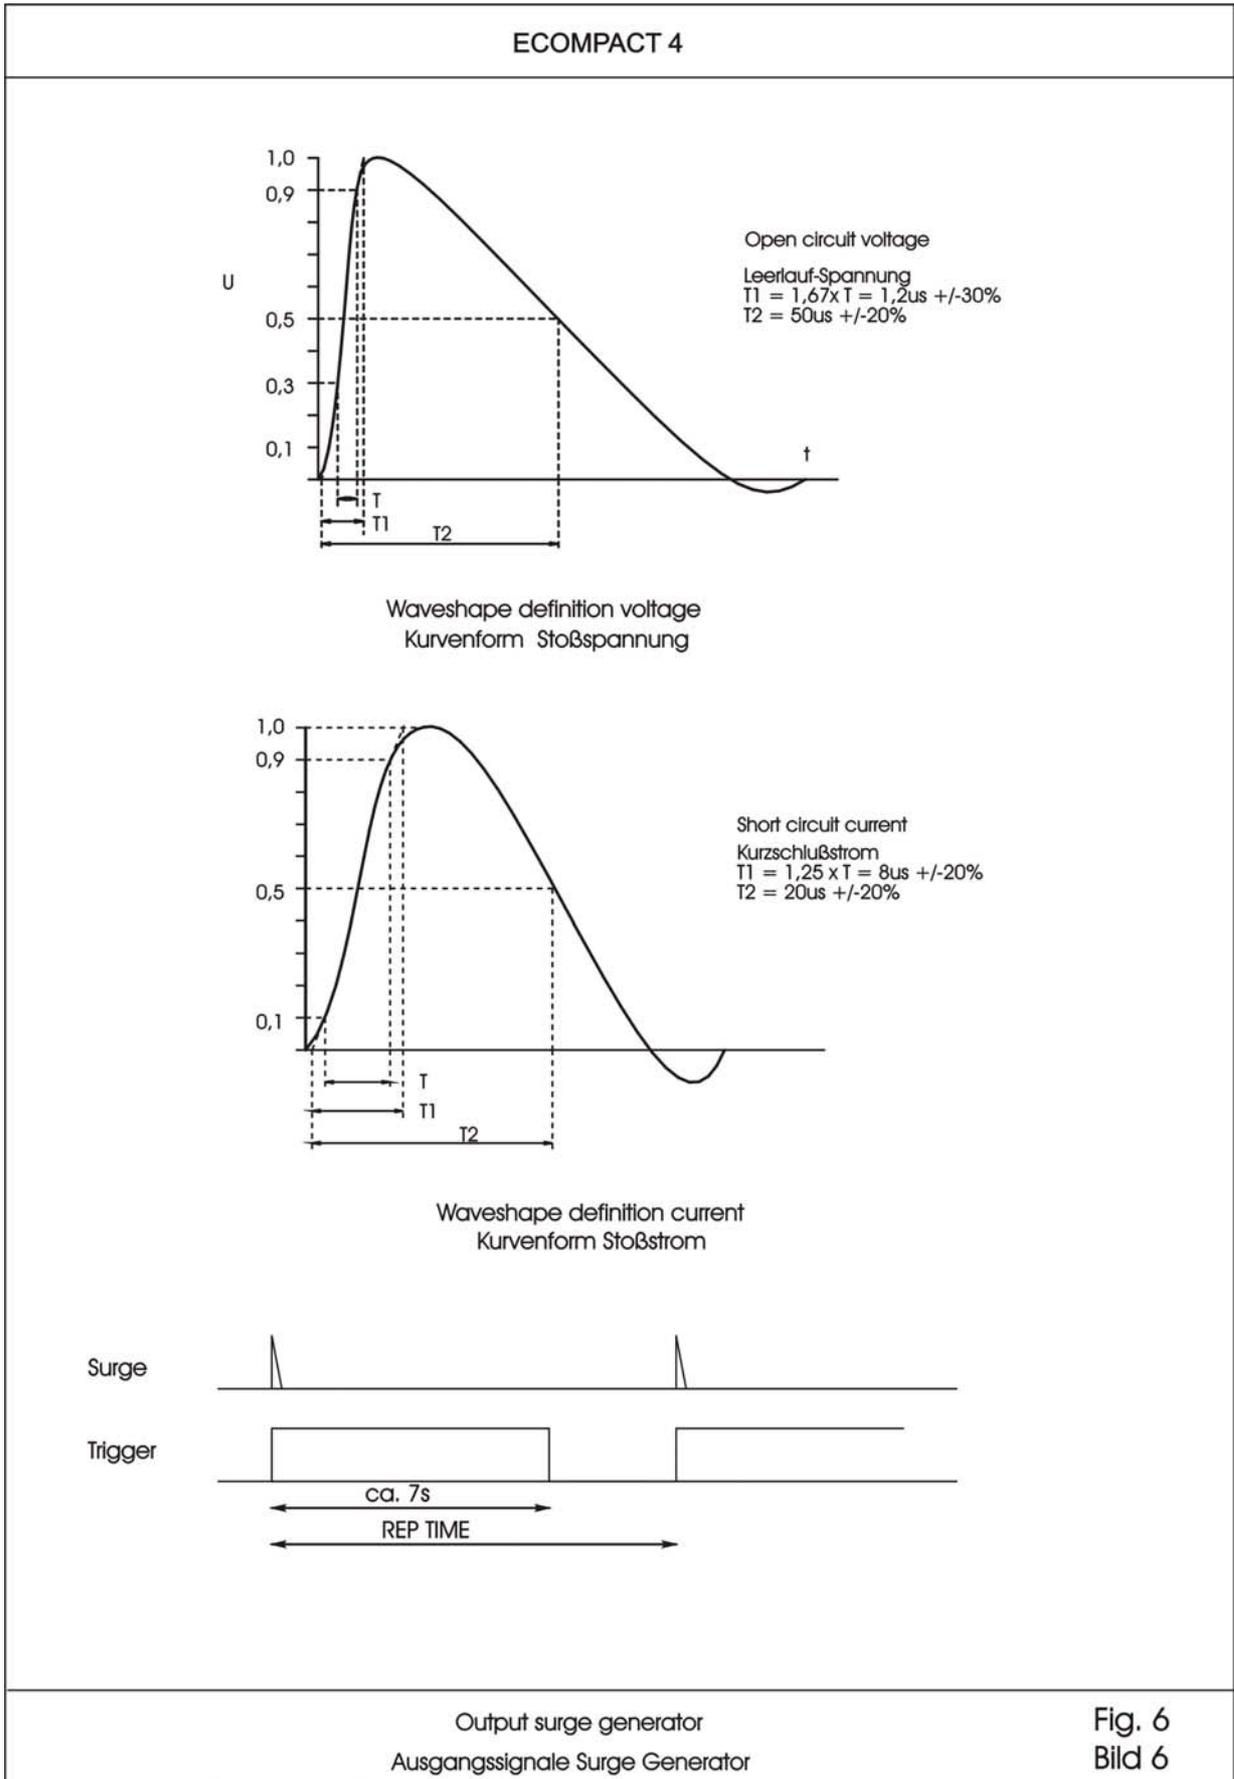


9.2.7 Counter function overview Fig.7

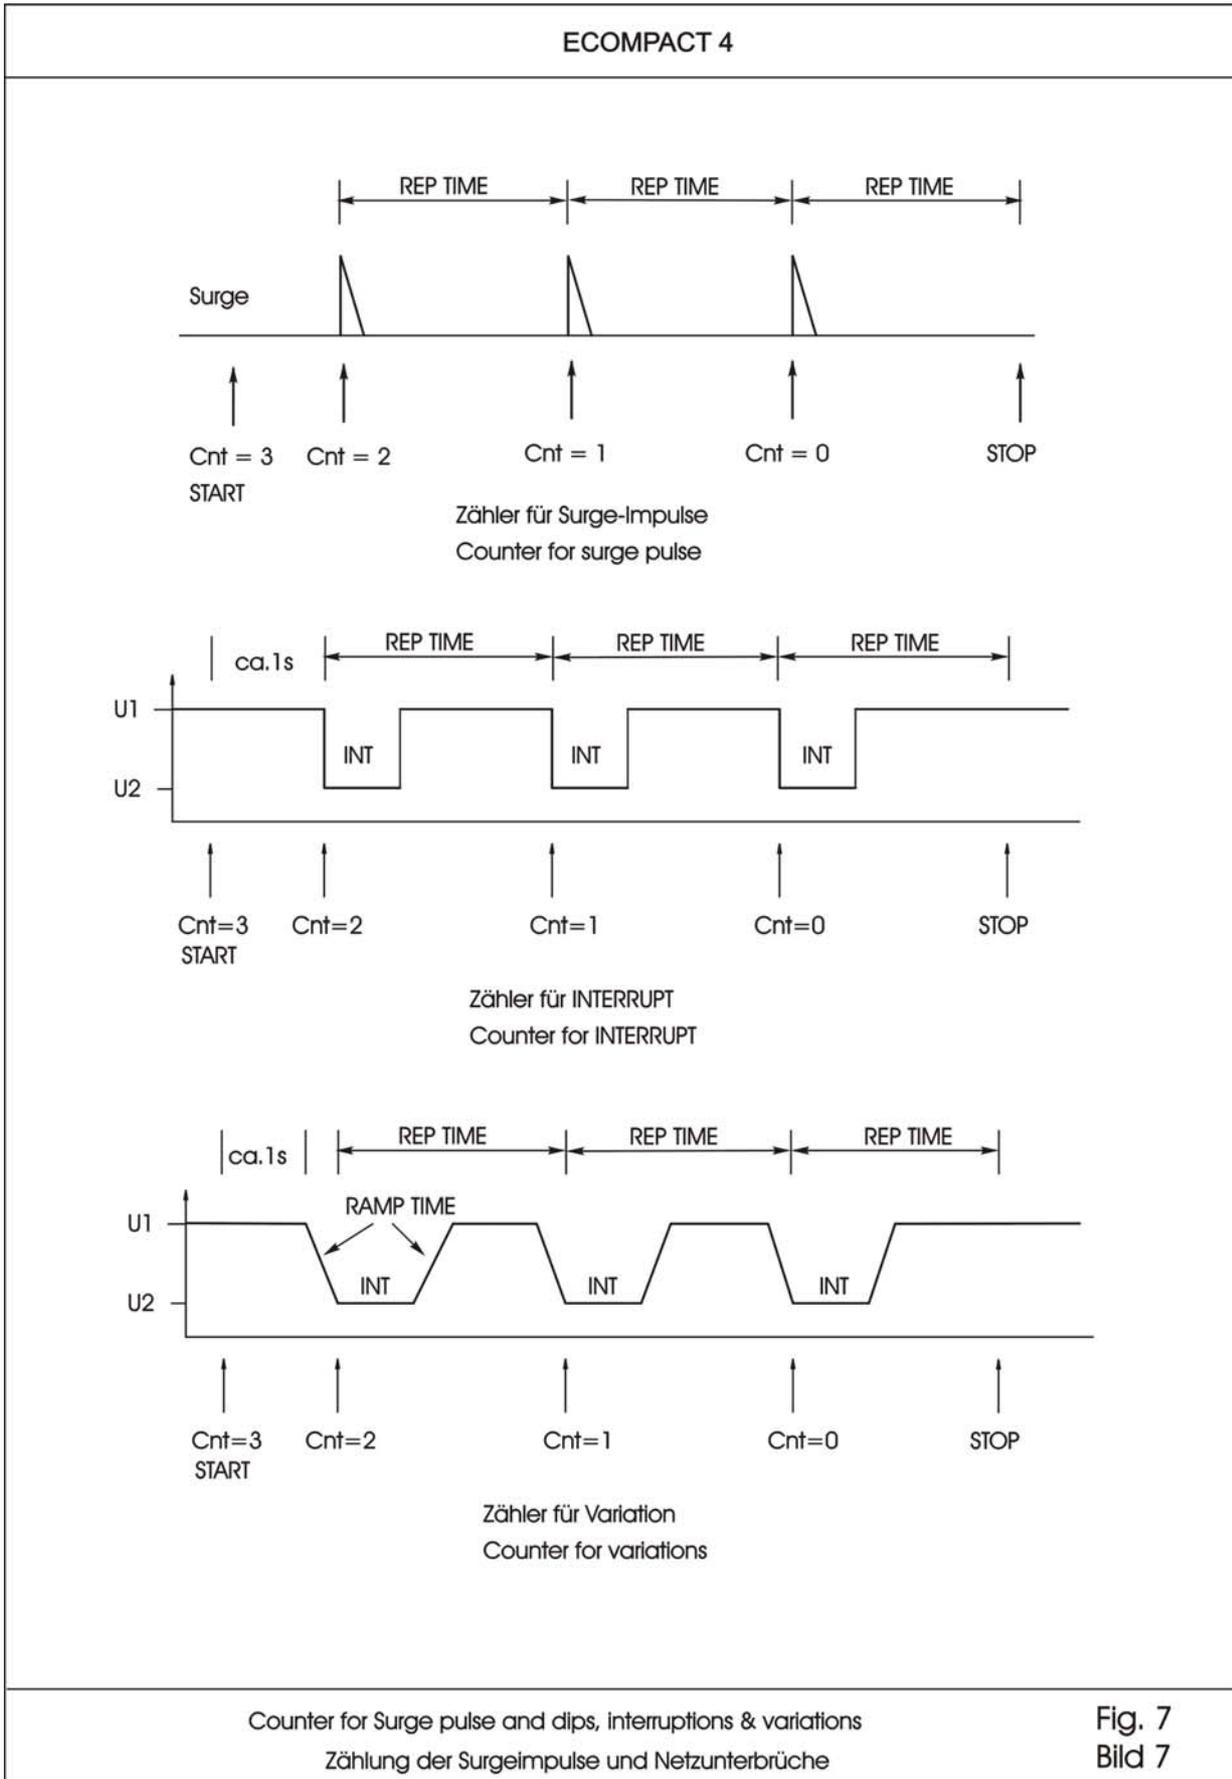


9.2.8 Surge coupling / decoupling example Fig.8

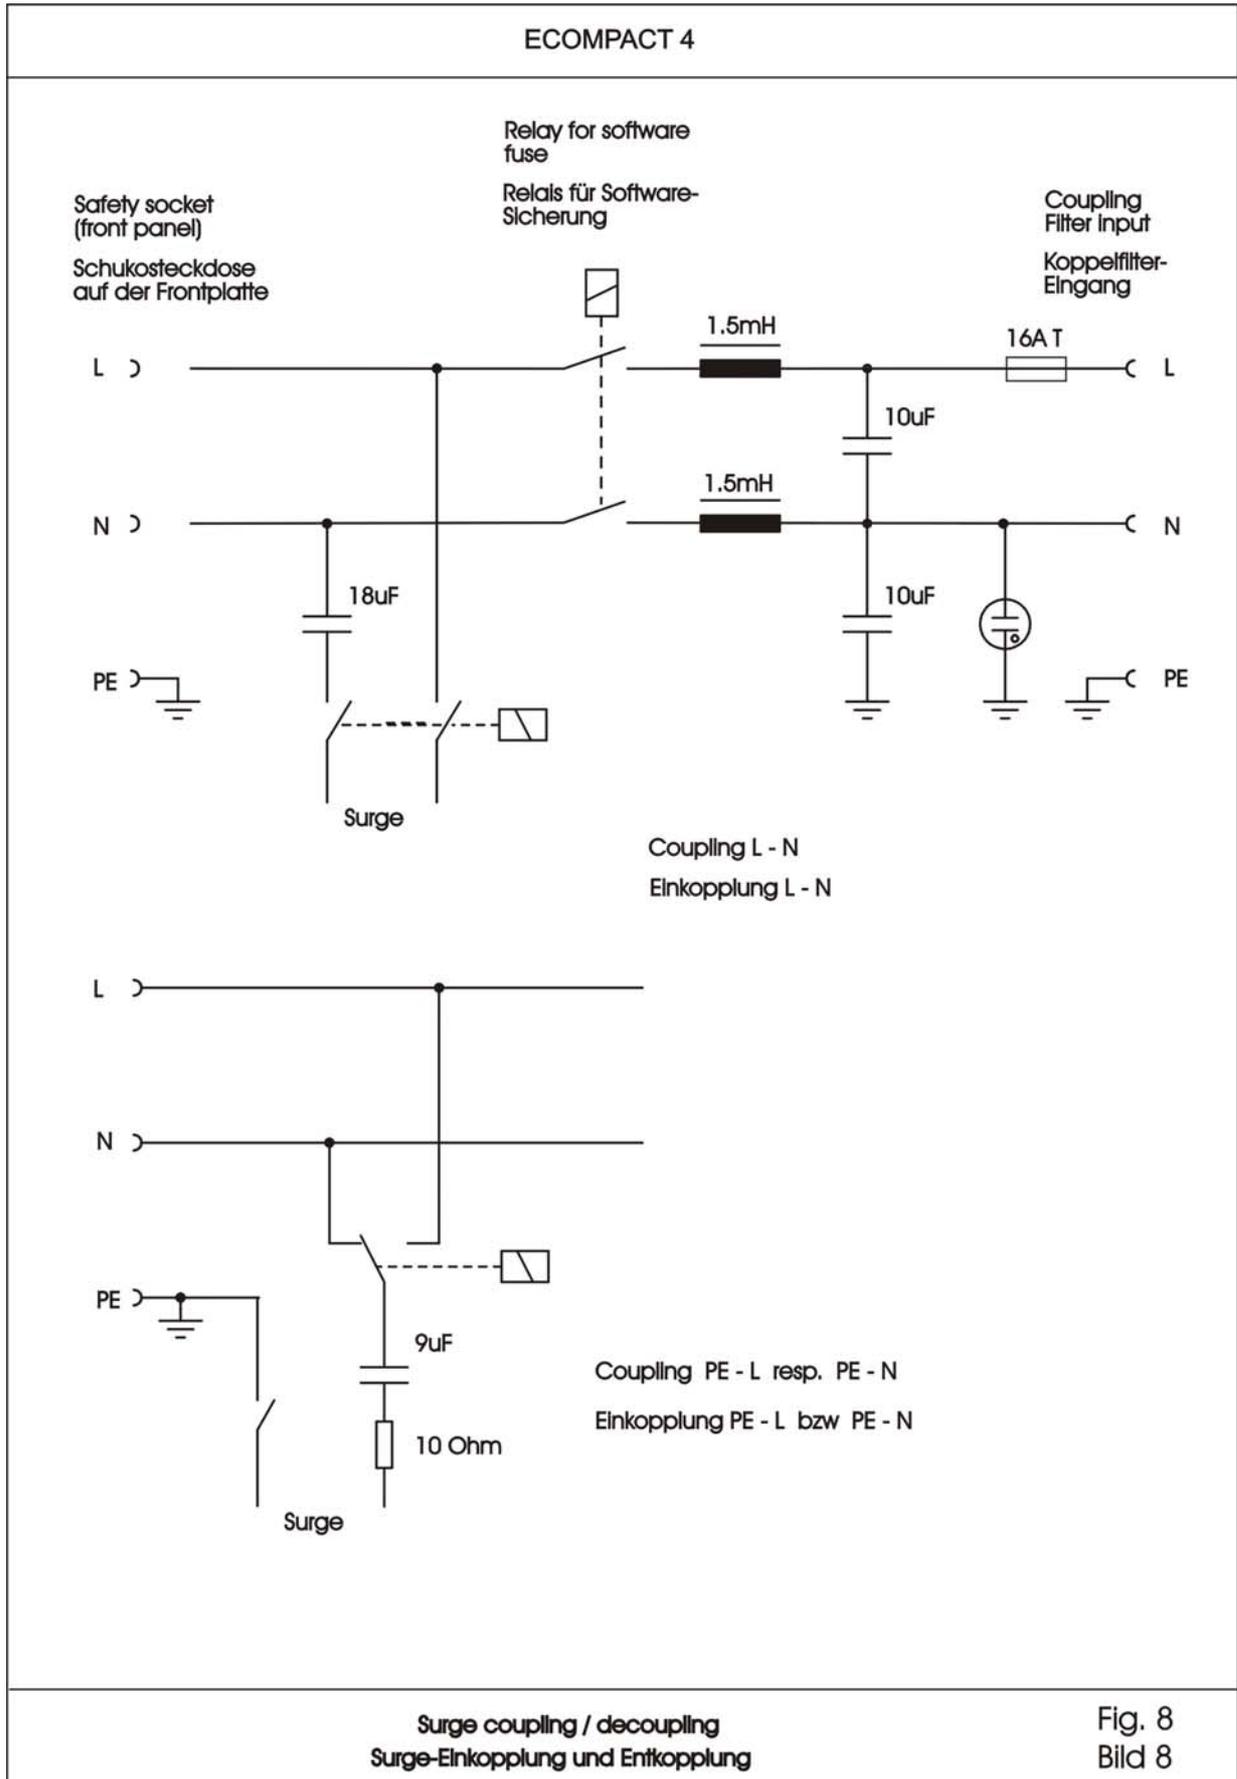


9.2.9 Internal dips transformer Fig. 9

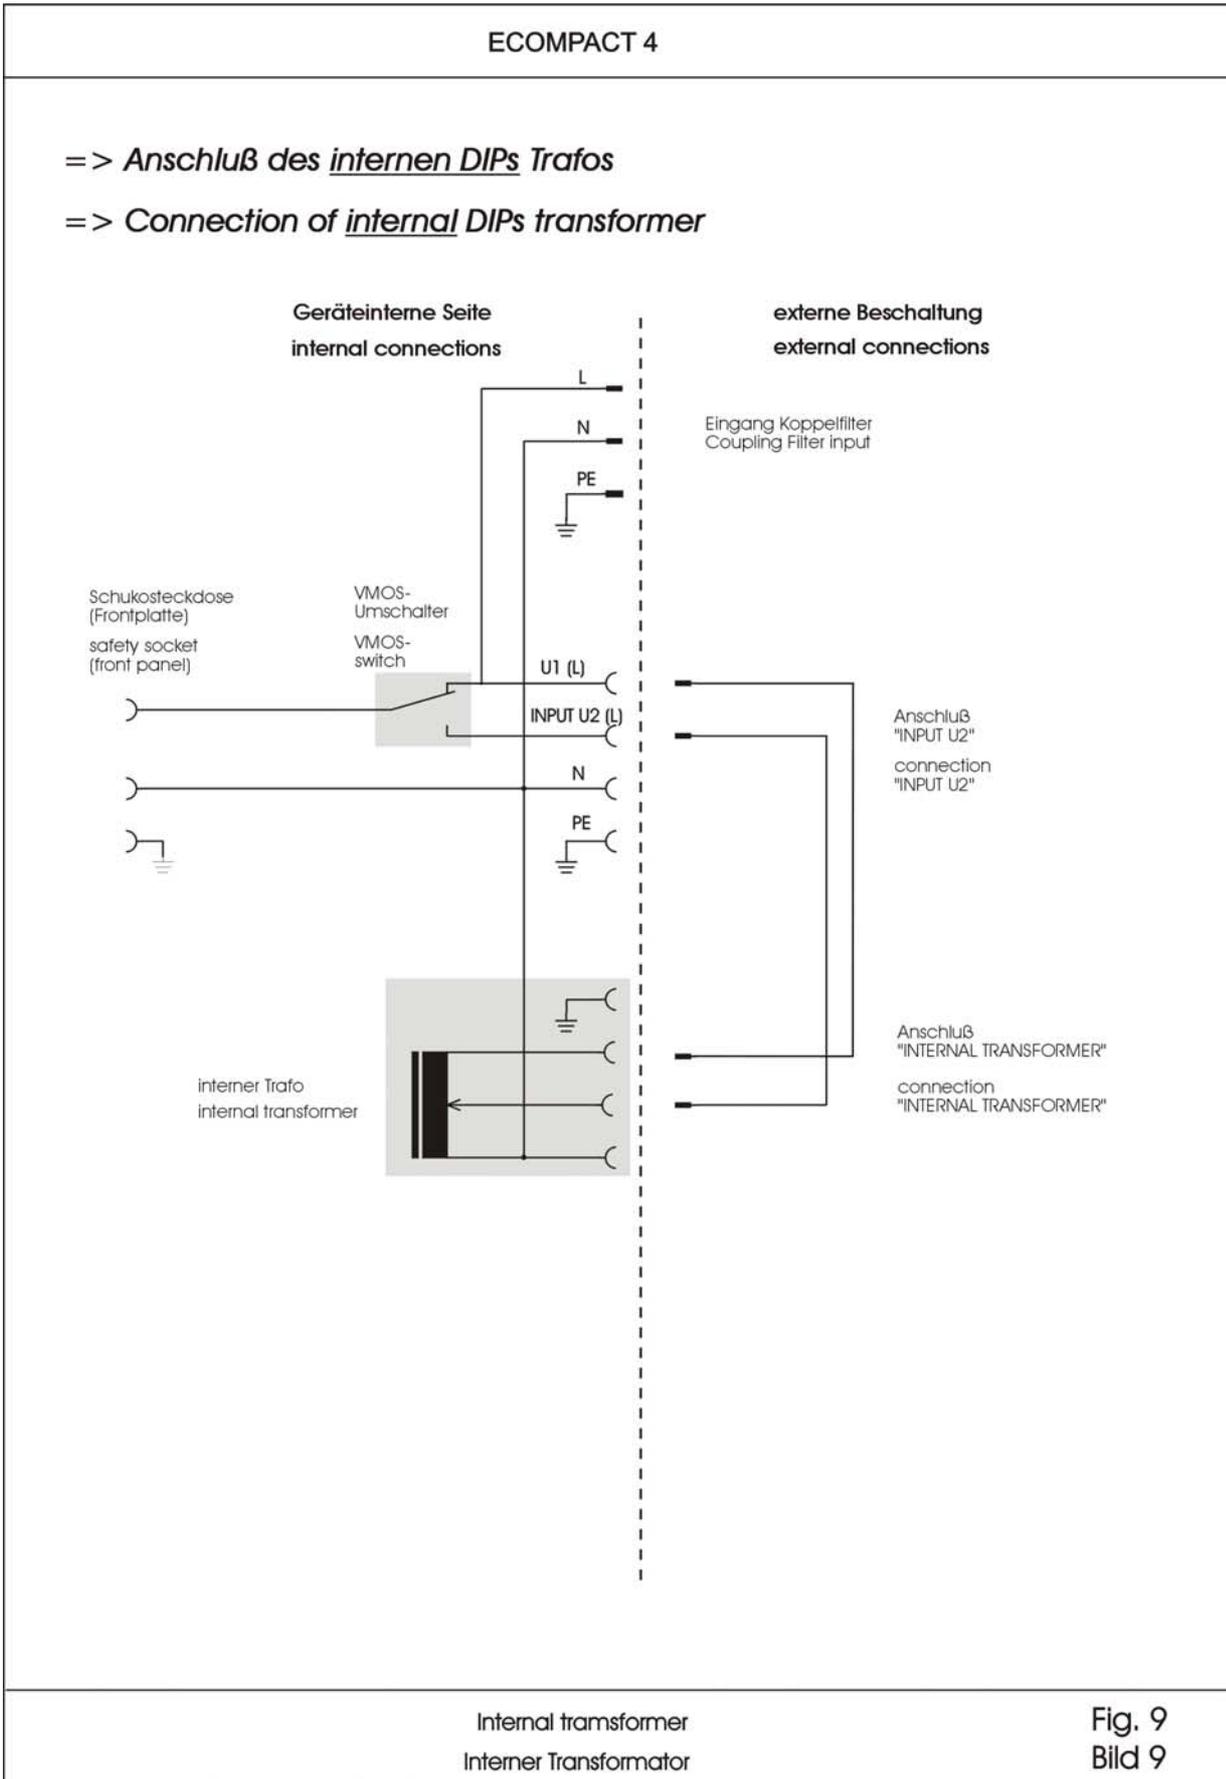

9.2.10 External dips transformer Fig. 10

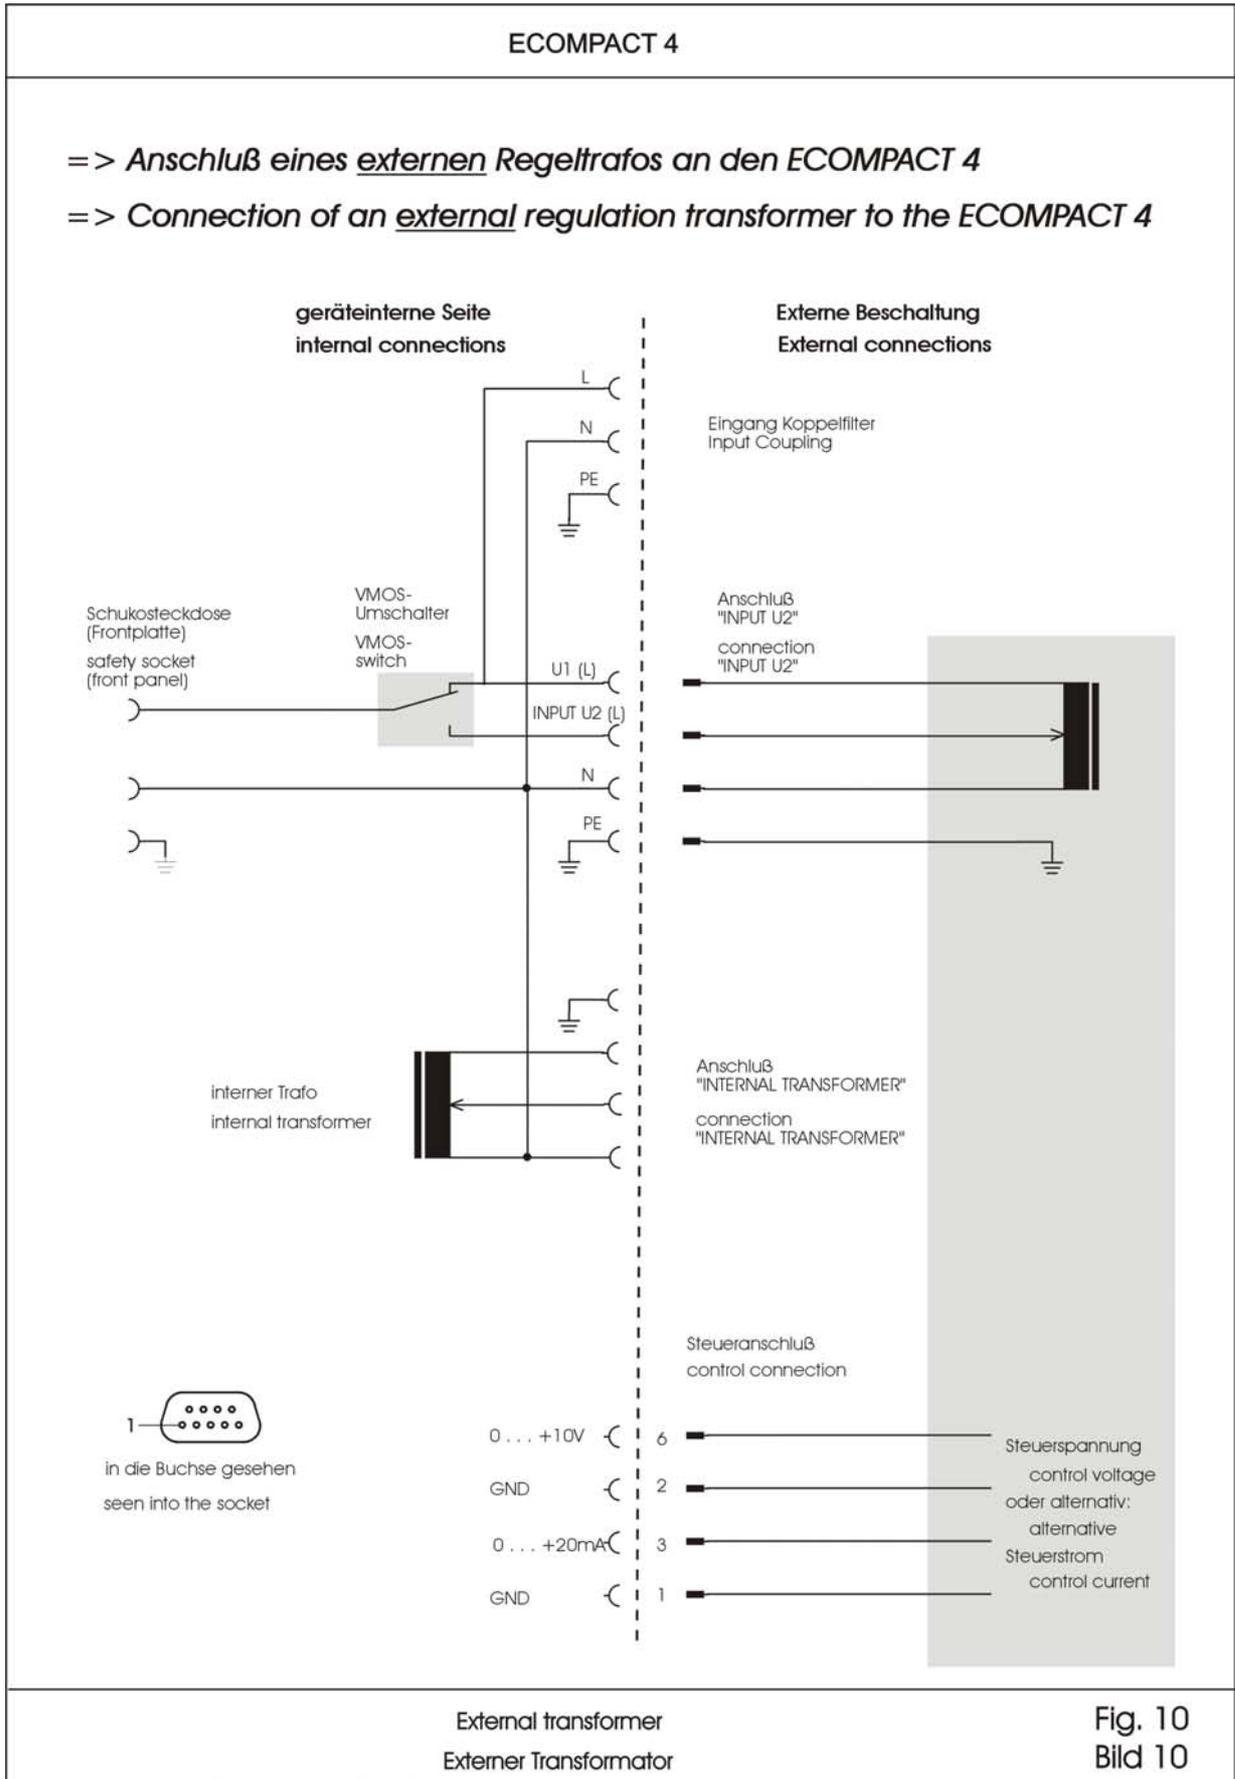

9.2.11 Voltage dips and interrupts output Fig.11

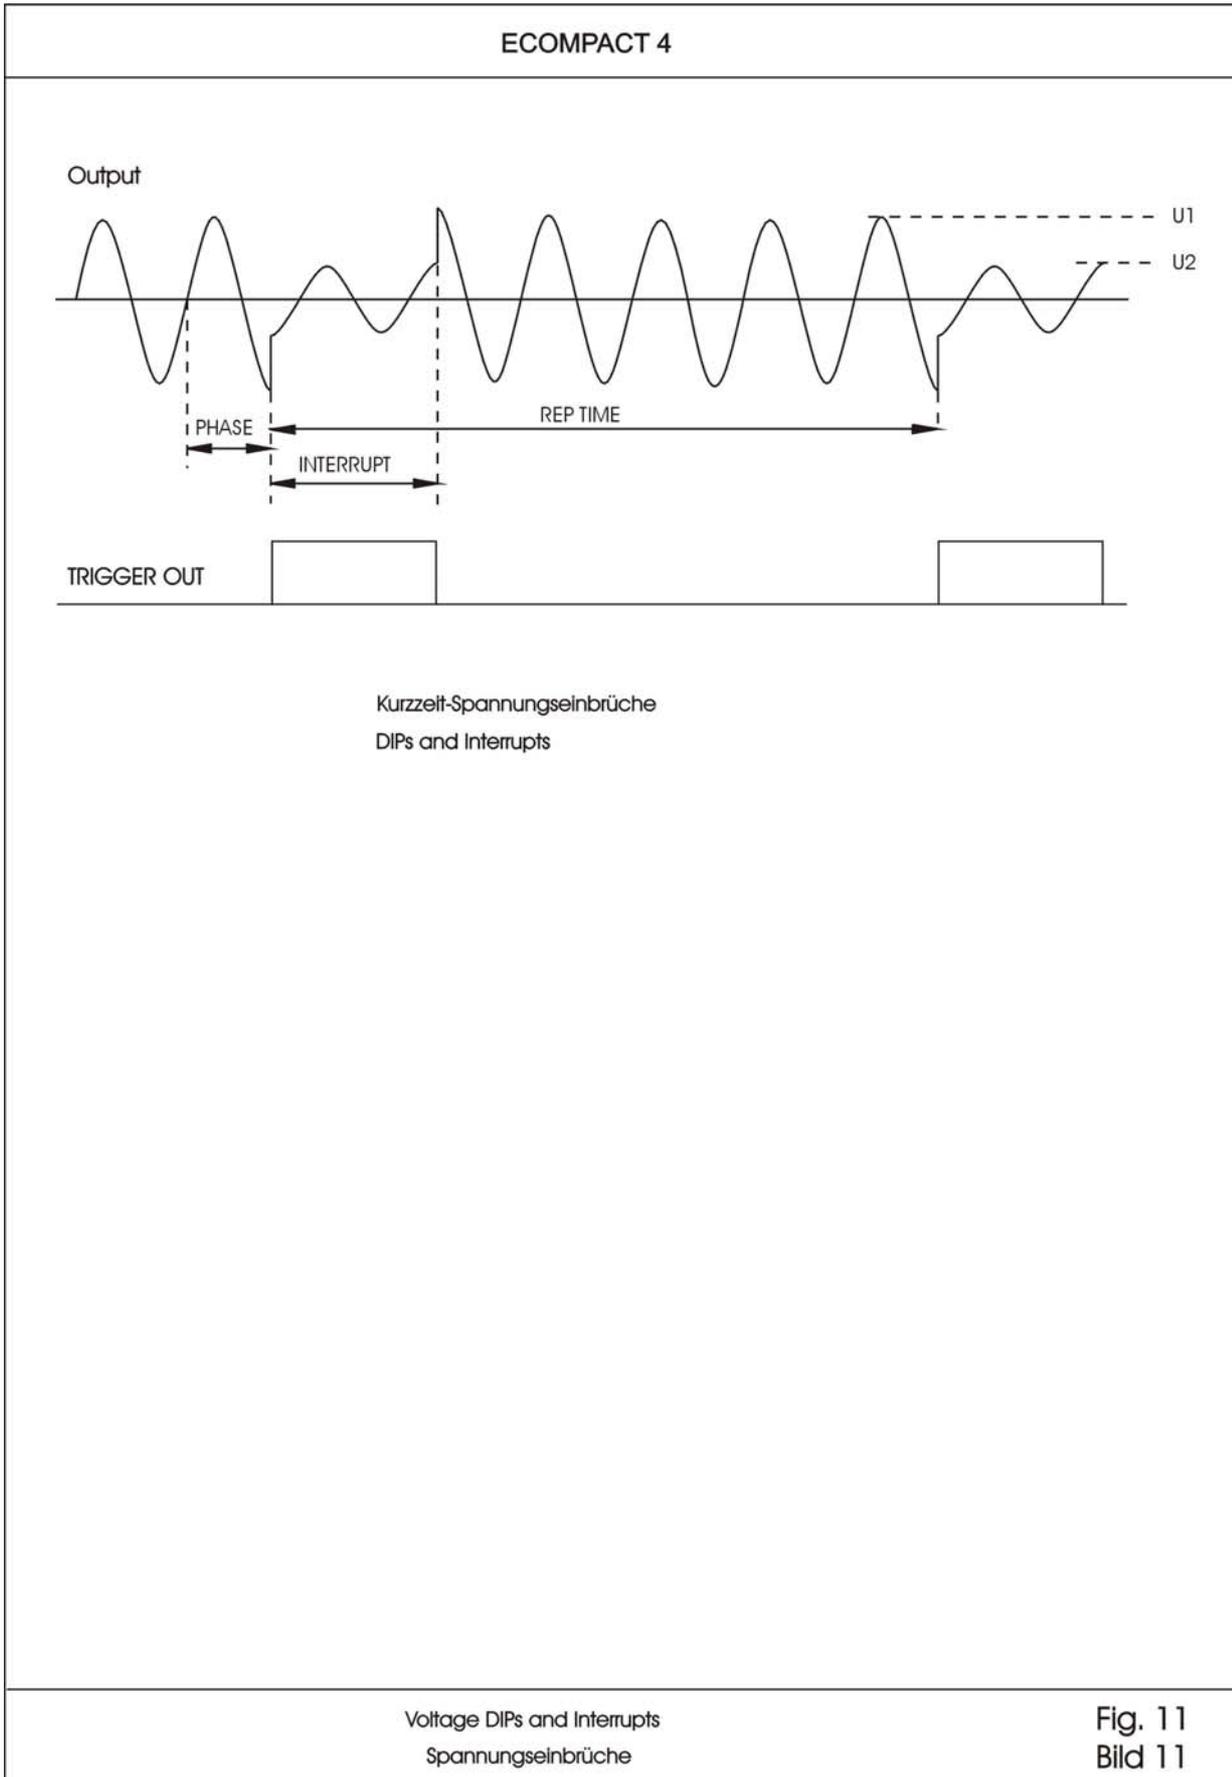

## 9.3 CE Declaration of Conformity



### DECLARATION OF CONFORMITY

**Haefely Test AG**  
Lehenmattstrasse 353  
4052 Basel  
Switzerland

declare, under his own responsibility, that the product here mentioned, complies with the requirements of the listed standards or other normative documents.

**So, the product complies with the requirements of the EMC directive 89/336/EEC, 92/31/EEC and 93/68/EEC and the low voltage directive 73/23/EEC and 93/68/EEC.**

Product: **ECOMPACT 4**

Description: The product ECOMPACT 4 generates electromagnetic interference according to different IEC standards. It is used to verify the conducted immunity of electrical products.

Standards: EN 61326: 1997 +A1:1998 +A2:2001 +A3:2003  
EN 61010-1: 2001

L. Walder  
Director Product Development  
Haefely Test AG  
Basel / Switzerland

  
.....  
(Signature)

Basel, November 4, 2005

**Important Notice:**

The function of this equipment is to generate electrical interference. Because of this the limits defined for emission can be exceeded for short periods when the high voltage is switched on.

