



ABN 43 064 478 842

➤ 231 osborne avenue clayton south, vic 3169
PO box 1548, clayton south, vic 3169
t 03 9265 7400 f 03 9558 0875
freecall 1800 680 680
www.tmgtestequipment.com.au

Test & Measurement

- sales
- rentals
- calibration
- repair
- disposal

Complimentary Reference Material

This PDF has been made available as a complimentary service for you to assist in evaluating this model for your testing requirements.

TMG offers a wide range of test equipment solutions, from renting short to long term, buying refurbished and purchasing new. Financing options, such as Financial Rental, and Leasing are also available on application.

TMG will assist if you are unsure whether this model will suit your requirements.

Call TMG if you need to organise repair and/or calibrate your unit.


If you click on the “Click-to-Call” logo below, you can call us for FREE!

TMG Corporate Website

TMG Products Website



Click-to-Call
TMG Now

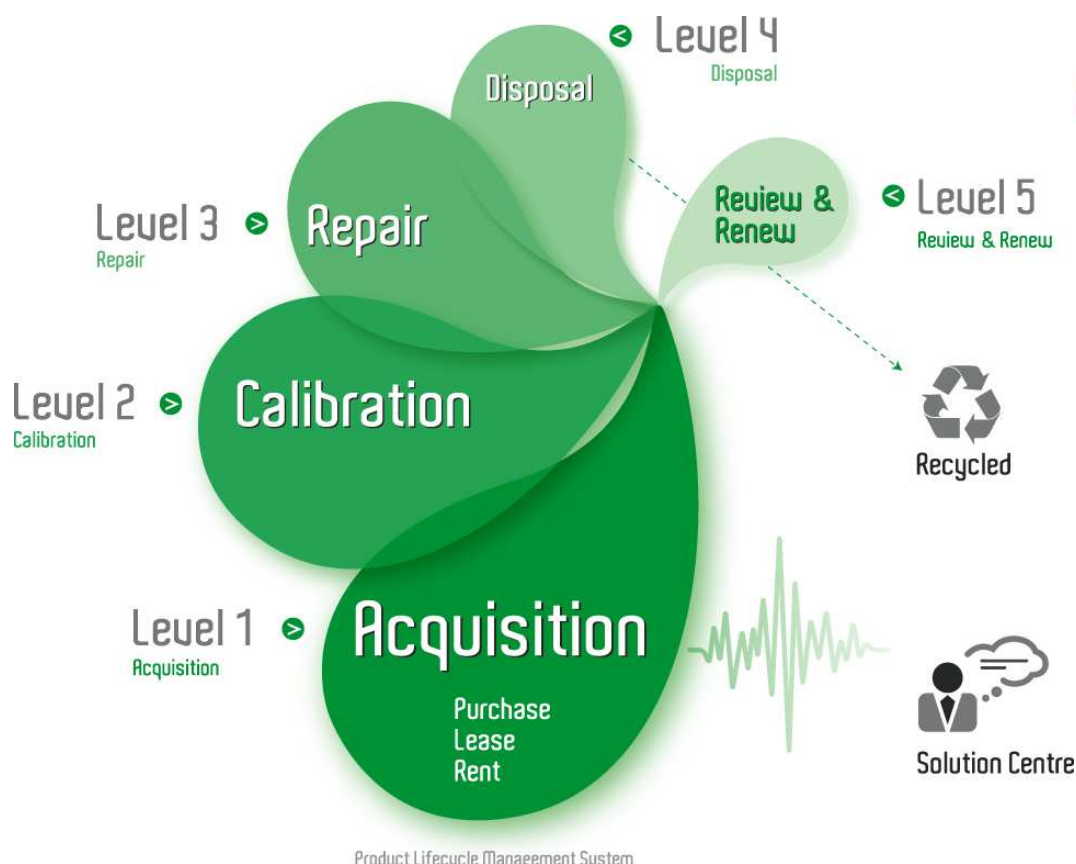

Disclaimer:

All trademarks appearing within this PDF are trademarks of their respective owners.



FSM-60S Fusion Splicer

The FSM-60S fusion splicer sets the standard for core alignment fusion splicing by incorporating a user-friendly interface with enhanced features to provide the most rugged and reliable fusion splicer in the market today. The new rugged construction adds improved reliability by resisting shock, dust, and rain, and can withstand a 30" drop test.

The FSM-60S splices a fiber in 9 seconds and heats a 60mm splice sleeve in 30 seconds, for a total cycle time of only 39 seconds. New features, such as automatic tube heater operation, user-selectable clamping method (sheath clamp or fiber holder system), automated monitor image orientation, and battery charge capability during splicer operation provide the end user a productivity tool they can count on.

New software included provides the ability to download splice data to a PC for splice data reporting, download splicer operating software via the internet to maintain peak performance, and download video images from the splicer to enhance technical support.

Features

- Rugged construction providing shock, dust and moisture resistance
- Dual monitor position with automatic image orientation
- Automatic arc calibration and fiber identification
- User-selectable fiber clamping method – sheath clamp or fiber holders
- Auto-start tube heater feature
- Color LCD display with anti-reflective coating for excellent visibility in bright sunlight
- Simultaneous battery charge and splicer operation
- Long life battery (up to 160 splice/heat cycles per charge)
- Detachable work table incorporated into the transit case
- Data and video download software included; software upgrade available via the internet
- Green friendly – RoHS & WEEE compliant

Ordering Information

DESCRIPTION	PART #
FSM-60S Fusion Splicer (machine only) <i>Includes:</i> ADC-13 AC Adapter, ACC-14 AC Cord, Spare Electrodes (pair), Sheath Clamp, USB Cable, Splicer Carrying Strap, Quick Reference Guide, Video Instruction Manual, JP-05 Splice Sleeve Cooling Tray, and Transit Case with Carrying Strap	S014531
FSM-60S Fusion Splicer Kit (with cleaver) <i>Includes:</i> CT30A Cleaver, ADC-13 AC Adapter, ACC-14 AC Cord, Spare Electrodes (pair), Sheath Clamp, USB Cable, Splicer Carrying Strap, Quick Reference Guide, Video Instruction Manual, JP-05 Splice Sleeve Cooling Tray, and Transit Case with Carrying Strap	S014532
FSM-60S Fusion Splicer Kit (with cleaver, battery and cord) <i>Includes:</i> BTR-08 Battery, DCC-14 Battery Charge Cord, CT30A Cleaver, ADC-13 AC Adapter, ACC-14 AC Cord, Spare Electrodes (pair), Sheath Clamp, USB Cable, Splicer Carrying Strap, Quick Reference Guide, Video Instruction Manual, JP-05 Splice Sleeve Cooling Tray, and Transit Case with Carrying Strap	S014562

FSM-60S Fusion Splicer

Accessories Recommended for the FSM-60S

DESCRIPTION	PART #
Cleavers	
CT-30A Cleaver	S014080
Fiber Holders (pairs)	
FH-60-250 Fiber Holder	S014548
FH-60-900 Fiber Holder	S014549
Batteries and Power Cords	
ADC-13 AC Adapter	S014535
BTR-08 Battery (160 splice/heat cycles)	S014540
DCC-14 Power Cord (connects ADC-13 to BTR-08)	S014541
DCC-12 Power Cord (connects ADC-13 to cigarette lighter socket)	S013552
DCC-13 Power Cord (connects ADC-13 to power source via alligator clips)	S013556

DESCRIPTION	PART #
Miscellaneous	
ELCT2-20A Electrodes	S013532
ASW-02 Splicing Workstation	S010532
JP-05 Splice Sleeve Cooling Tray	S014537
CLAMP-S60A Sheath Clamp (8mm min. cleave for 250µm, 16mm min. cleave for 900µm)	S014550
CLAMP-S60B Sheath Clamp (8mm min. cleave for 250µm and 900µm)	S014551
CLAMP-S60 Sheath Clamp (for 900µm loose tube fiber)	S014552
CC-24-60S Transit Case (fits only FSM-60S)	S014559
One Year Extended Warranty	S012996
Two Year Extended Warranty	S013000

Specifications

PARAMETER	VALUE
Model	FSM-60S Fusion Splicer
Applicable Fibers	Single-mode (ITU-T G.652), Multimode (ITU-T G.651), DS (ITU-T G.653), NZDS (ITU-T G.655)
Cladding Diameter	80µm to 150µm
Coating Diameter	100µm to 1,000µm
Fiber Cleave Length	8 to 16mm with 250µm coating diameter, 16mm with 900µm coating diameter
Typical Average Splice Loss	0.02dB with SM, 0.01dB with MM, 0.04dB with DS, 0.04dB with NZDS
	Measured by cut-back method relevant to ITU-T and IEC standards
Splicing Time	Typical 9 seconds with standard single-mode fiber
Arc Calibration Method	Automatic, real-time and by using results of previous splice when in AUTO mode, manual arc calibration function available
Splicing Modes	100 preset and user programmable modes
Splice Loss Estimate	Based upon dual camera core alignment data
Storage of Splice Result	Last 2000 results to be stored in the internal memory
Fiber Display	X or Y, or both X and Y simultaneously. Front or rear monitor display options with automated image orientation
Magnification	300X for single X or Y view, or 187X for X and Y view
Viewing Method	Dual cameras with 4.1 inch TFT color LCD monitor
Operating Condition	0 to 5,000m above sea level, 0 to 95%RH and -10 to 50°C respectively
Mechanical Proof Test	1.96 to 2.25N
Tube Heater	Built-in tube heater with 30 heating modes; auto-start function
Tube Heating Time	Typical 30 seconds with FP-03 sleeve, 35 seconds with FP3 (40), 35-55 seconds with Fujikura micro sleeves
Protection Sleeve Length	60mm, 40mm, micro
Splice/Heat Cycles with Battery	Typical 160 cycles with power save functions activated
Power Supply	Auto voltage selection from 100 to 240V AC or 10 to 15V DC with ADC-11, 13.2V DC with BTR-08 battery
Terminals	USB 1.1 (USB-B type) for PC communication. Mini-DIN (6-pin) for HJS-02/03 and SH-8 tube heater
Wind Protection	Maximum wind velocity of 15m/s. (34 mph)
Dimensions	136W x 161D x 143H (mm) / 5.3W x 6.3D x 5.6H (inches)
Weight	2.3 kg (5.1 lbs) with AC adapter ADC-11; 2.7kg (5.9 lbs) with BTR-08 battery